

Service Manual


Stereo Integrated Amplifier

Amplifier

SU-A900MK2

Colour

(K) Black Type

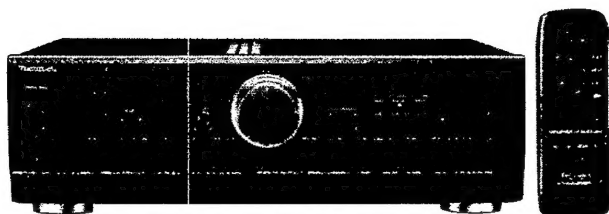

Areas

Suffix for Model No.	Area	Colour
(E)	Europe	(K)
(EB)	Great Britain	
(EG)	Germany and Italy	
(GC)	Asia, Latin America, Middle Near East and Africa	
(GN)	Oceania	

Specifications (DIN 45 500)

20 Hz – 20 kHz continuous power output both channels driven	2 × 90 W (8 Ω)
1 kHz continuous power output both channels driven (THD: 1%)	2 × 100 W (8 Ω) 2 × 140 W (4 Ω)
63 Hz – 12.5 kHz continuous power output both channels driven (THD: 0.7%)	2 × 90 W (8 Ω) 2 × 125 W (4 Ω)
Total harmonic distortion rated power at 20 Hz – 20 kHz	0.01% (8 Ω)
Intermodulation distortion (50 Hz: 7 kHz = 4:1, SMPTE) rated power	0.007% (8 Ω)
Residual hum and noise	1 mV
Damping factor	60 (8 Ω) 30 (4 Ω)
Headphones output level/impedance	540 mV/330 Ω
Load impedance	
A or B	4 – 16 Ω
A and B	8 – 16 Ω
Input sensitivity/impedance	
PHONO MM	2.5 mV/47 kΩ
PHONO MC	170 μV/220 Ω
TUNER, CD, AUX, TAPE 1, TAPE 2/DCC	150 mV/22 kΩ
Phono maximum input voltage (1 kHz, RMS)	
MM	160 mV (IHF '66)
MC	12 mV (IHF '66)
S/N (rated power, 4Ω)	
PHONO MM	78 dB (85 dB, IHF '66)
PHONO MC	64 dB (S = 250 μV, 66 dB, IHF '66)
TUNER, CD, AUX, TAPE 1, TAPE 2/DCC	91 dB (100 dB, IHF '66)
S/N at – 26 dB power (4 Ω)	
PHONO MM	68 dB
PHONO MC	63 dB
TUNER, CD, AUX, TAPE 1, TAPE 2/DCC	70 dB

S/N at 50 mW power (4 Ω)

PHONO MM 64 dB

TUNER, CD, AUX, TAPE 1, TAPE 2/DCC 64 dB

Frequency response

PHONO MM RIAA standard curve ±0.8 dB
(30 Hz – 15 kHz)

TUNER, CD, AUX, TAPE 1, TAPE 2/DCC

3 Hz – 80 kHz (+0, –3 dB)
+0 dB, –0.3 dB (20 Hz – 20 kHz)

Tone controls

BASS 50 Hz, +10 to –10 dB

TREBLE 20 kHz, +10 to –10 dB

Output voltage

TAPE 1, TAPE 2/DCC REC OUT 150 mV

Channel balance (AUX 250 Hz – 6.3 kHz)

±1 dB

Channel separation (AUX 1 kHz)

50 dB

GENERAL

Power consumption 315 W

Power supply

For (E) and (EG) areas 50 Hz/60 Hz AC, 230 V

For (EB) and (GN) areas 50 Hz/60 Hz AC, 230 V – 240 V

For (GC) area only 50 Hz/60 Hz AC, 110 V – 127 V / 220 V – 240V

Dimensions (W × H × D)

430 × 136 × 365 mm

Weight

9.4 kg

Notes:

- Specifications are subject to change without notice.
Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.
- For areas except Europe
The specification values given have been measured while using a 240 V power supply.

For (EB) area only

This apparatus was produced to BS 800.

Technics

Contents

	Page		Page
• Before Repair	2	• Schematic Diagram	14~20
• Protection Circuitry	2	• Printed Circuit Board Diagram	21~25
• Accessories	2	• Wiring Connection Diagram	26
• Caution for Mains Lead	3	• Block Diagram	27
• Front Panel Controls	4	• Function of IC Terminals	28
• Connections	5, 6	• Replacement Parts List	29~35
• Listening to Sound	7, 8	• Cabinet Parts Location	33, 34
• Recording	9	• Packaging	35
• Operation Check and Main Component Replacement Procedures	10~13		

Before Repair

- (1) Turn off the power supply. Using a 10 Ω , 10 W resistor, connect both ends of power supply capacitors (C701, C702) in order to discharge the voltage.
 (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110 V/127 V/220 V/240 V.

Power supply voltage	AC 230 V	AC 240 V	AC 110~127 V	AC 220~240 V
Consumed current 50Hz	70~270 mA	60~260 mA	120~500 mA	60~260 mA

Protection circuitry

The protection circuitry may have operated if either of the following conditions is noticed:

- * No sound is heard when the power is switched ON.
- * Sound stops during a performance.

The functions of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

For areas except (E) (EB) (EG) (GN) —

CAUTION:

 
The AC voltage differs according to the area.

Be sure to set the proper voltage in your area before use.


Accessories

- AC power supply cord 1


for (E), (EG) and (GC) areas : (RJA0019-2K)




for (EB) area : (VJA0733)

 

for (GN) area : (RJA0036-K)

 


- Remote control transmitter
(RAK-SU129WH) 1

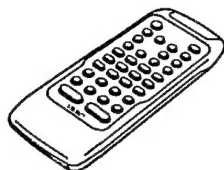

- Batteries
(UM-4, "AAA", R03) 2
- Note:** These are available on sales route.



 - Power plug adaptor
(SJP5213-2) 1
- for (GC) area only





■ Caution for AC Mains Lead (For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:


Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .


Before use

Remove the connector cover as follows.

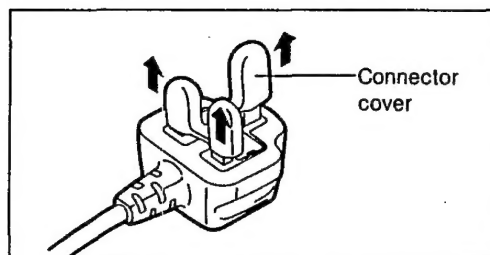


How to replace the fuse


1. Remove the fuse cover with a screwdriver.

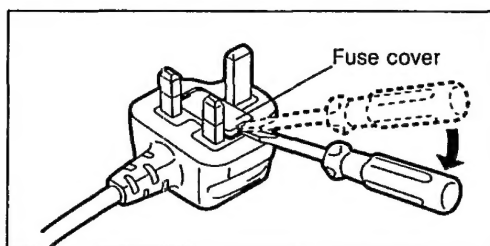
 


2. Replace the fuse and attach the fuse cover.

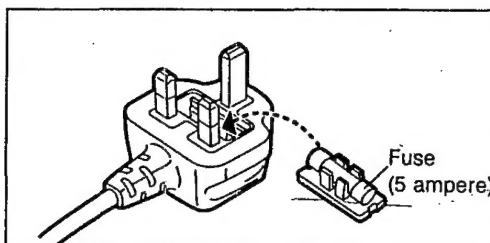

■ Front Panel Controls

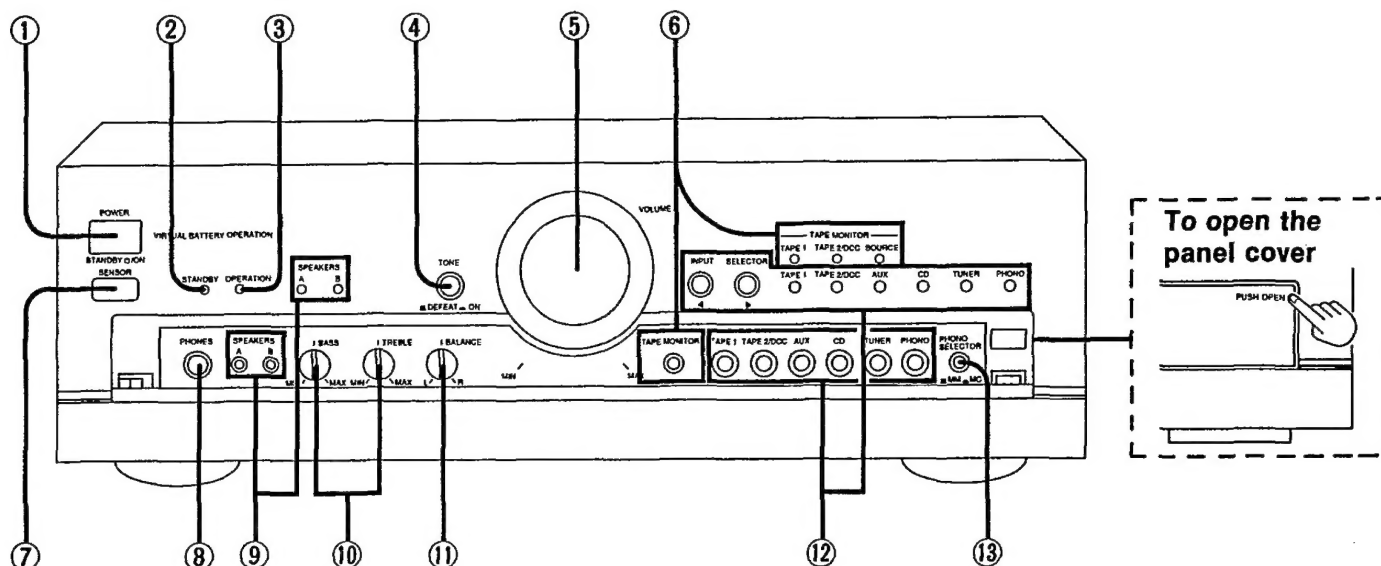

No.	Name
①	Power "STANDBY  ON" switch (POWER, STANDBY  ON) Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
②	"STANDBY" indicator (STANDBY) When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
③	Operation indicator (OPERATION) When the power is switched ON, this indicator illuminates after about 4 seconds when the unit is in the operating condition. If an abnormal condition in the circuitry is detected, such as DC voltage appearing in the output or a short-circuit of the positive (+) and negative (-) wires from the speaker terminals, the protection circuit functions and this indicator will not illuminate.
④	Tone control button (TONE)
⑤	Volume control (VOLUME)
⑥	Tape-monitor button/indicators (TAPE MONITOR)

No.	Name
⑦	Remote control signal receptor (SENSOR) Receives the signals from the remote control.
⑧	Headphones jack (PHONES)
⑨	Speaker select buttons/indicators (SPEAKERS)
⑩	Tone controls (BASS/TREBLE)
⑪	Balance control (BALANCE)
⑫	Input select buttons/indicators (INPUT SELECTOR)
⑬	Phono cartridge selector (PHONO SELECTOR)


■ Connections

To connect to each terminal

Make connections to each component in the system by using stereo connection cables (not included).

Stereo connection cable

White (L) 
Red (R) 

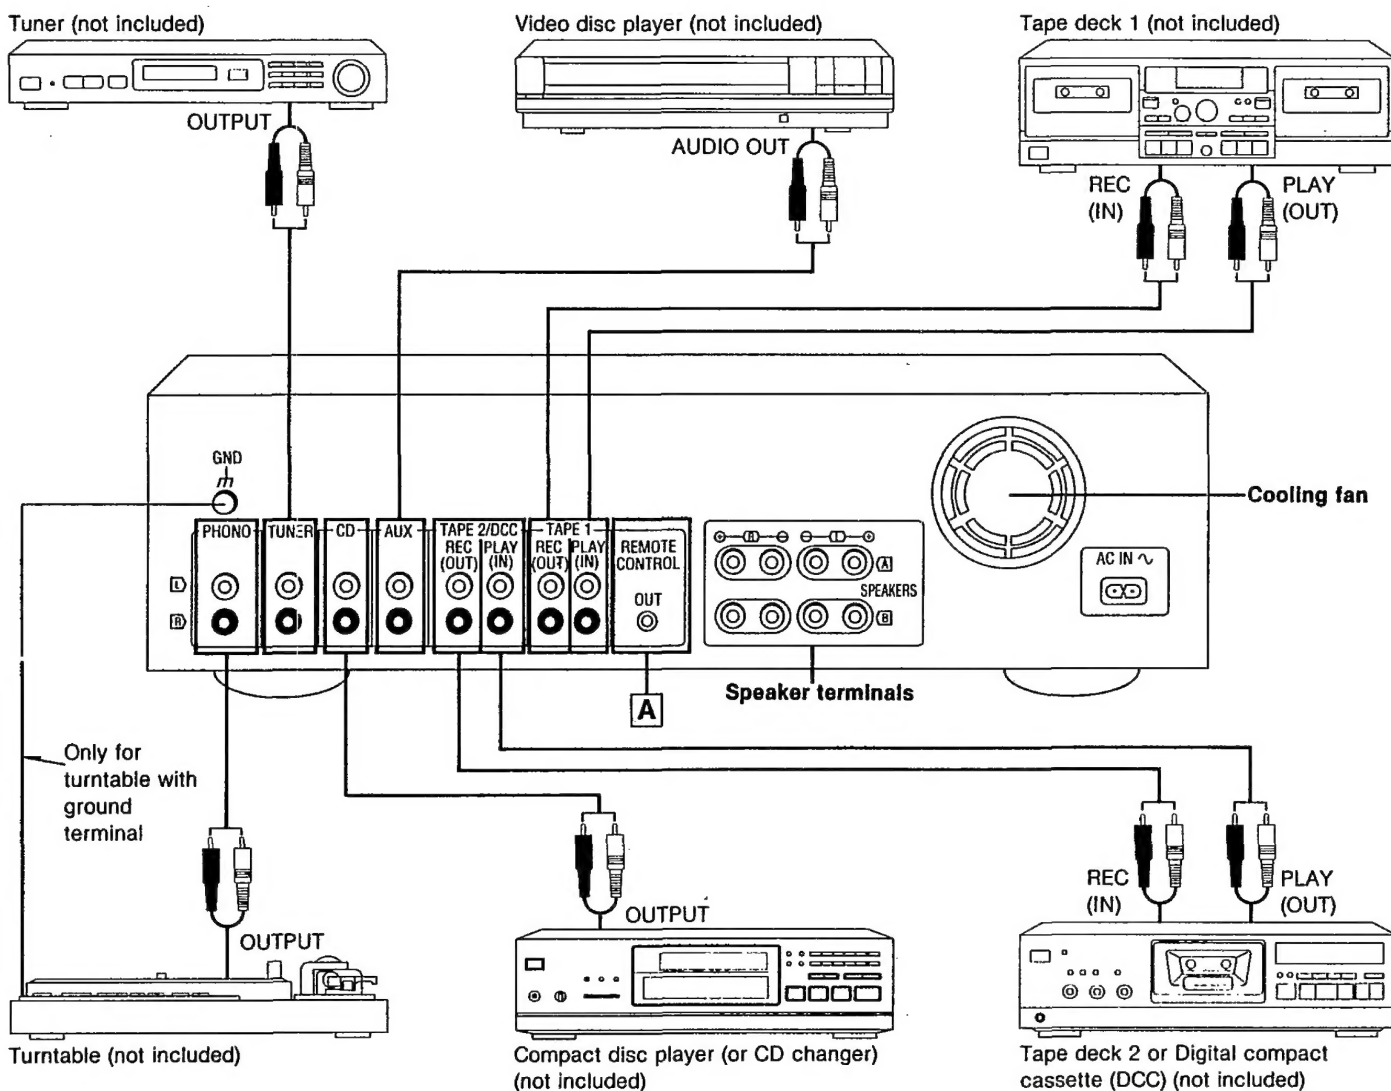


A "REMOTE CONTROL OUT" terminal

Connect the connection cable for the remote control to a Technics tape deck and/or CD player (or CD changer) which has the appropriate remote control terminal as shown at the right.


If a tape deck is not being used, the CD player (or CD changer) can be connected directly (dotted line).

Note


For a tape deck and/or CD player (or CD changer) with a remote control sensor, this connection is not necessary.

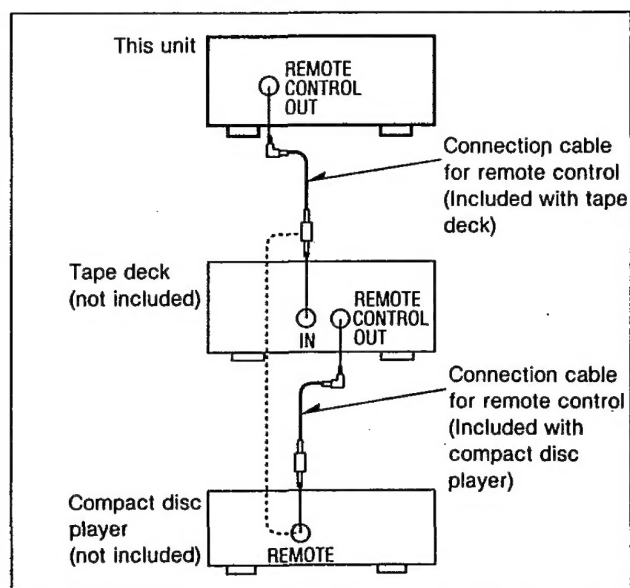


To connect the speakers

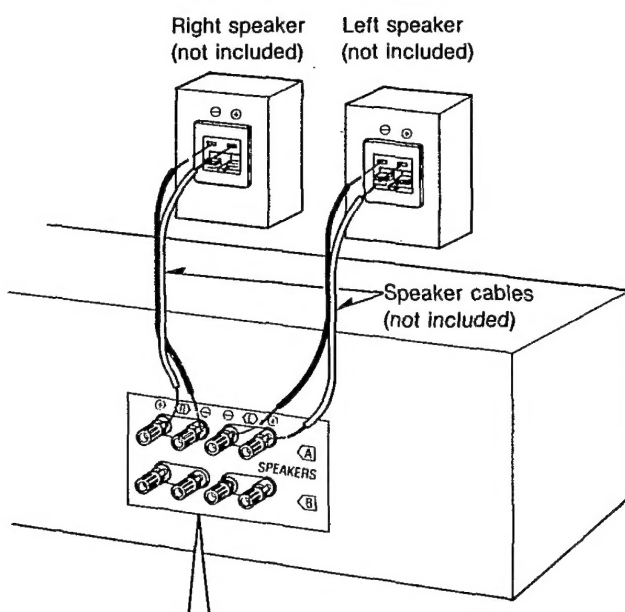

 ① Strip off the outer covering, and twist the center conductor.



② Turn completely to the left.

 


③ Insert the wire and turn completely to the right. Pull the cord to assure a proper connection.

Note Be sure to only connect positive (+) cords to positive (+) terminals, and negative (-) cords to negative (-) terminals.

Note

To prevent damage to circuitry, never short-circuit the positive (+) and negative (-) speaker wires.

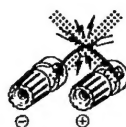

■ "B" terminals

For connection to a second pair of speakers.

■ Speaker impedance

- When only the "A" or only the "B" terminals are used: 4–16 ohms
- When both the "A" and the "B" terminals are used simultaneously: 8–16 ohms

About the cooling fan


The cooling fan operates at high power output levels only.

To connect the AC power supply cord

FOR UNITED KINGDOM ONLY
BE SURE TO READ THE CAUTION FOR THE AC POWER SUPPLY CORD ON PAGE 3 BEFORE CONNECTING THE AC POWER SUPPLY CORD.


For areas except United Kingdom, Europe, Australia and N.Z.

Be sure to set the voltage selector to "110 V–127 V" or "220 V–240 V" according to the area in which the unit will be used. [Use a minus (-) screwdriver]

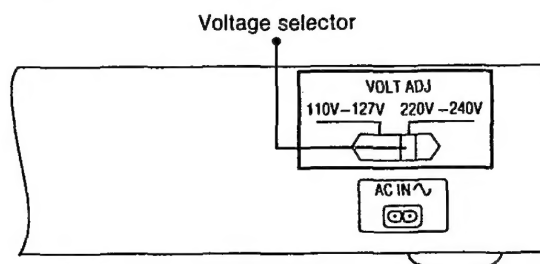

Note

Note that this unit will be seriously damaged if this setting is not made correctly.

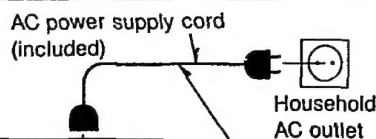

Connect this cord after all other cables and cords are connected.

Note


The configuration of the AC power supply cord differs according to area.

(For areas except Australia and N.Z.)

Insertion of Connector


Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing.

However there is no problem using the unit.

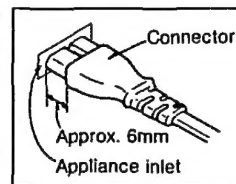


Not supplied for United Kingdom, Europe, Australia and N.Z.


 
If the power plug will not fit your socket, use the power plug adaptor (included).



■ Listening to Sound

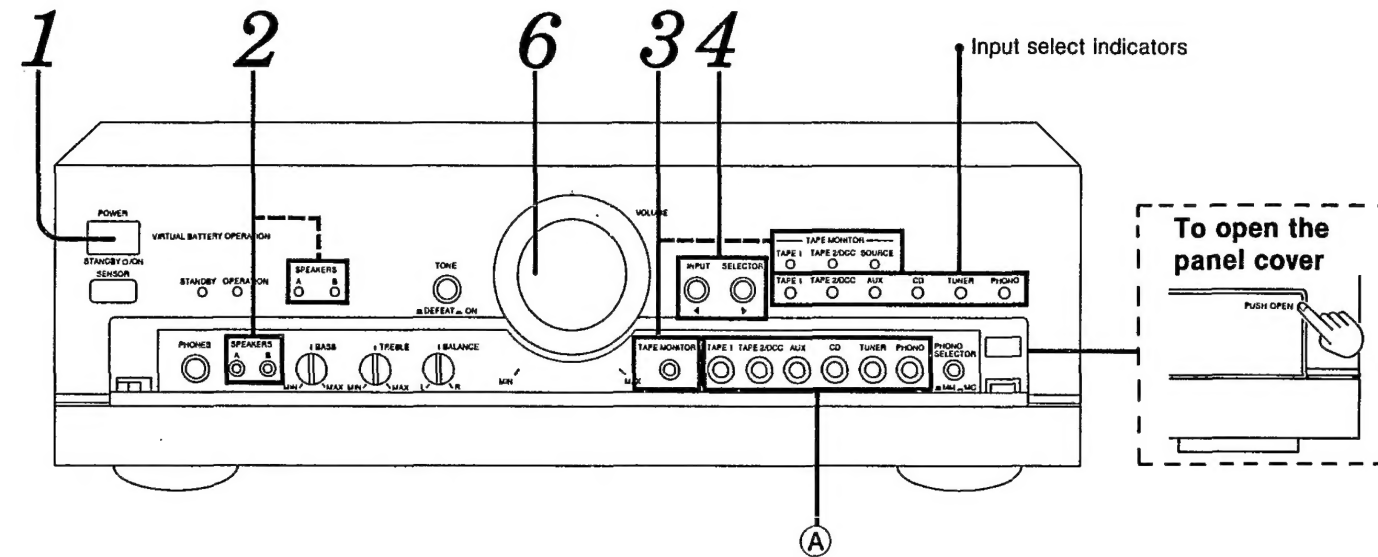

Before operation, set VOLUME to the "MIN" position.

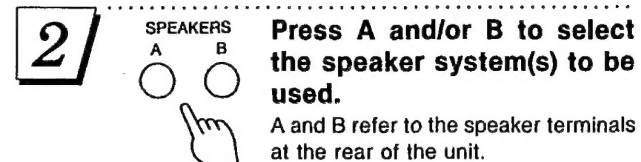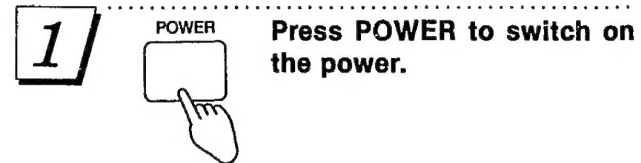


The corresponding indicator above will illuminate to indicate which speaker system is selected.

A: Sound can be heard from the speakers connected to the "A" terminals.


B: Sound can be heard from the speakers connected to the "B" terminals.

A and B: Sound can be heard simultaneously from the speakers connected to the "A" terminals and the "B" terminals.

off: No sound will be heard from the speakers. (Both indicators will turn off.)

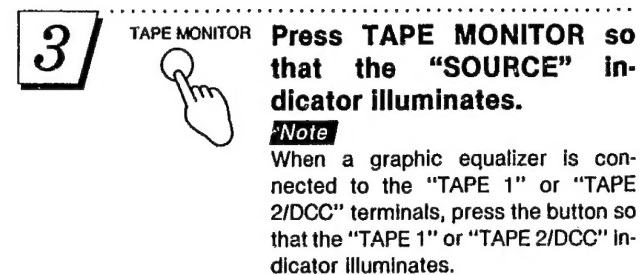

 Note
When a graphic equalizer is connected to the "TAPE 1" or "TAPE 2/DCC" terminals, press the button so that the "TAPE 1" or "TAPE 2/DCC" indicator illuminates.



- Each time the button is pressed, the illuminated position of the input select indicator will shift one position to the left.
- Each time the button is pressed, the illuminated position of the input select indicator will shift one position to the right.

To directly select the input source

The desired input source can be selected directly by using the input select buttons (A) located inside the panel.

TAPE 1: Set to this position to listen to equipment connected to the "TAPE 1" terminals.


TAPE 2/DCC: Set to this position to listen to equipment connected to the "TAPE 2/DCC" terminals.

AUX: Set to this position to listen to equipment connected to the "AUX" terminals.

CD: Set to this position to listen to compact discs.


TUNER: Set to this position to listen to radio broadcasts.

PHONO: Set to this position to listen to phono discs. Then, set the phono cartridge selector to the position which corresponds to the type of cartridge used on the turntable.

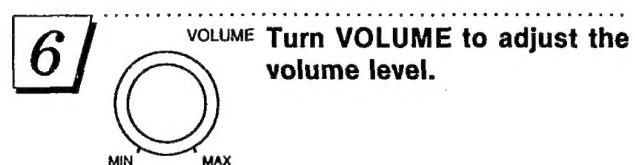


After listening is finished

Be sure to reduce the volume level, and switch the power to the standby condition by pressing POWER.

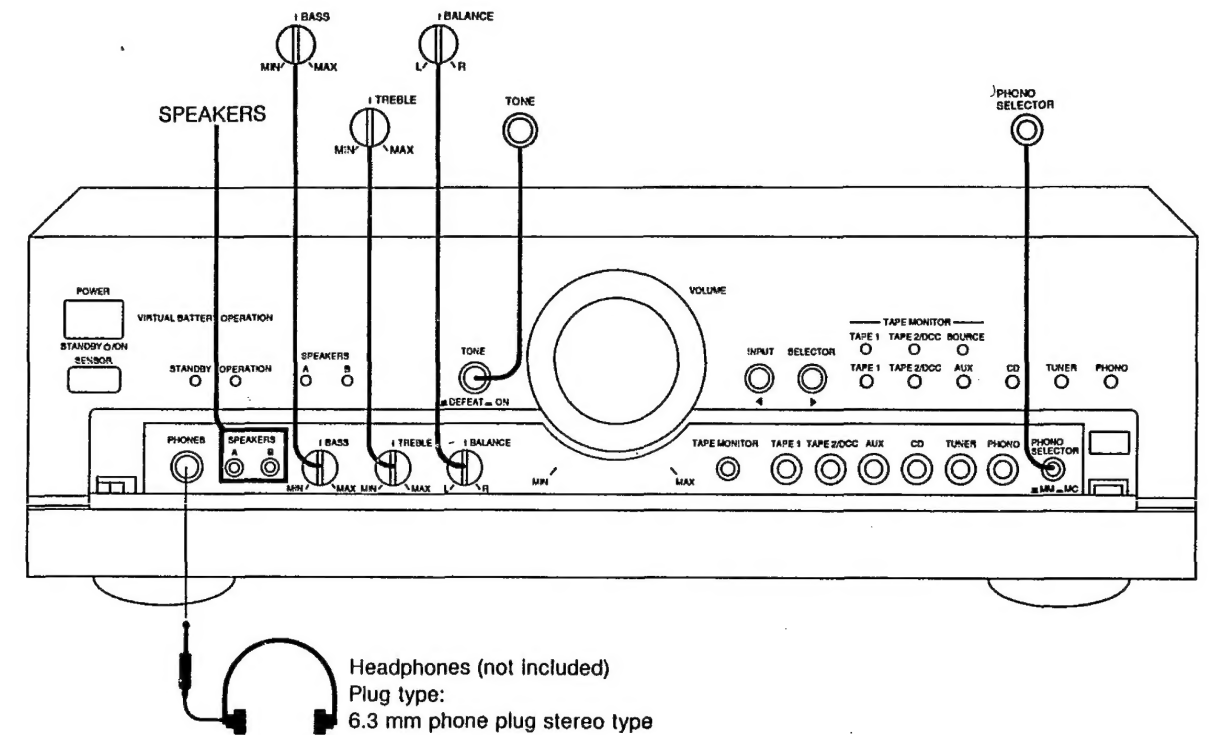

To adjust the tone quality

 TONE
Set TONE to the "ON" position. If set to the "DEFEAT" position, tone controls have no effect.



BASS
Turn BASS to adjust the low-frequency sound.

TREBLE
Turn TREBLE to adjust the high-frequency sound.

To adjust the sound balance

BALANCE
Turn BALANCE to adjust the left/right sound balance.

When listening phono discs

PHONO SELECTOR
Select the cartridge type.

MM:
Set to this position when using a moving-magnet type cartridge or high-output moving-coil cartridge (1 mV or more).

MC:
Set to this position when using a moving-coil type cartridge.

When listening through headphones

Use VOLUME to reduce the volume level, and connect the headphones.


If sound from speakers is not wanted, press SPEAKERS (A) and/or (B) to turn off the speaker select indicators.

Note
Avoid listening for prolonged periods of time to prevent hearing damage.

■ Recording

To record from compact discs, etc.

It is possible to record from units which are connected to the rear "AUX", "CD", "TUNER" or "PHONO" terminals to cassette tape decks or DCC decks which are connected to the "TAPE 1" or "TAPE 2/DCC" terminals.

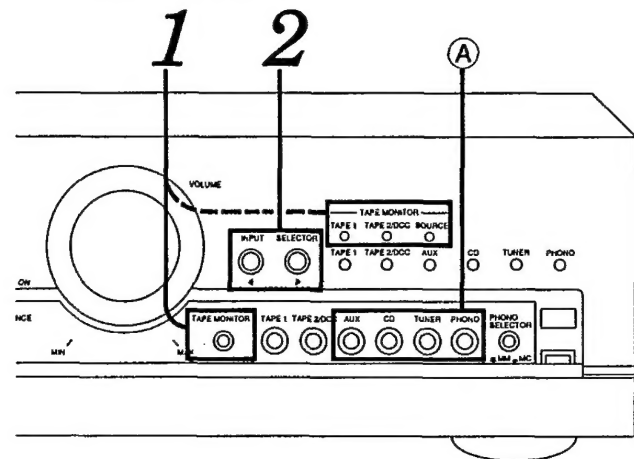

Before recording, prepare the tape deck or DCC for recording (recording level adjustment, etc.). See the tape deck's or DCC's operating instructions for details.

1 Press TAPE MONITOR so that the "SOURCE" indicator illuminates.

2 Select the program source to be recorded.

AUX: To record from equipment connected to the "AUX" terminals.
CD: To record from compact discs.
TUNER: To record from radio broadcasts.
PHONO: To record from phono discs.

3 Begin recording.
Follow your tape deck's or DCC's operating instructions.

4 Begin the source to be recorded.

■ To directly select the source for recording


The desired source can be selected directly by using the input select buttons (A B) located inside the panel.

■ To check the sound recorded while recording is being made

If a cassette tape deck with 3 heads is connected to the "TAPE 1" or "TAPE 2/DCC" terminals, it is possible to check the sound being recorded onto the tape.

Tape-to-tape recording

It is possible to record from tape deck 1 (the cassette tape deck which is connected to the "TAPE 1" terminals) to tape deck 2 (the cassette tape deck or DCC deck which is connected to the "TAPE 2/DCC" terminals) and vice versa.

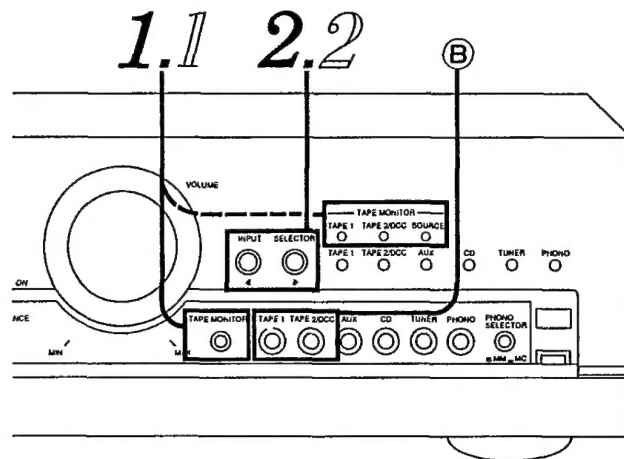

Preparation

- Before recording, prepare the tape deck or DCC for recording (recording level adjustment, etc.). See the tape deck's or DCC's operating instructions for details.
- Load tapes which have been advanced to the end of the leader tape into both decks.

To record from tape deck 2 to 1

1 Press TAPE MONITOR so that the "SOURCE" indicator illuminates.

2 Press ◀ or ▶ to select "TAPE 2/DCC".

3 Begin tape deck 1 for recording and tape deck 2 for playback.

To record from tape deck 1 to 2

1 Press TAPE MONITOR so that the "SOURCE" indicator illuminates.

2 Press ◀ or ▶ to select "TAPE 1".

3 Begin tape deck 2 for recording and tape deck 1 for playback.

TAPE MONITOR



Press TAPE MONITOR to select the deck (tape deck 1 or 2) and set the monitor switch on the tape deck to "TAPE".

TAPE 1: when recording on tape deck 1
TAPE 2/DCC: when recording on tape deck 2

■ Operation Check and Main Component Replacement Procedures


NOTE

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.
4. Illustrated screws are equivalent to actual size.
5. [] indicates parts No.

● Contents

	Page
1. Checking for the Volume P.C.B. /Operation P.C.B. /Tone AMP P.C.B.	11.
2. Checking for the Main P.C.B.	12.
3. Replacement for power IC.	13.


1. Common disassembly procedures (Follow this procedure prior to other disassembly.)

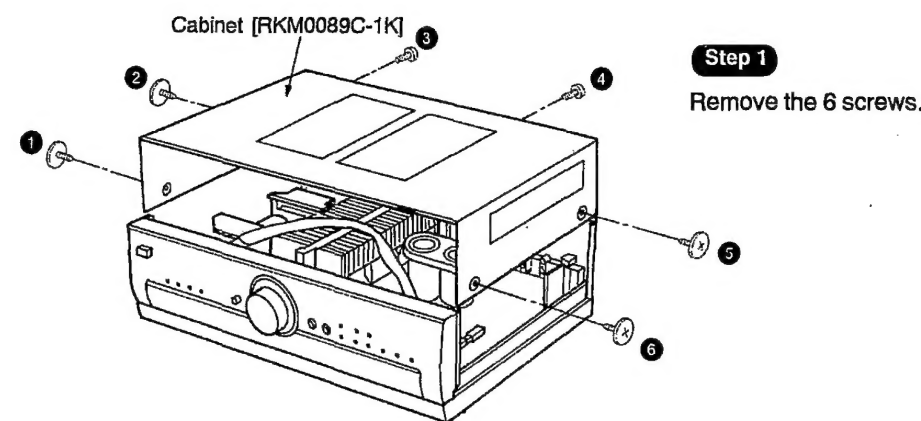

- 1, 2, 5, 6
[RHD30035-K1] (Black)
- 3, 4
[XTBS3+8JFZ1] (Black)


2. Checking for the Volume P.C.B. / Operation P.C.B. / Tone AMP P.C.B.

To check the operation of each P.C.B., use item 1 on page 10.


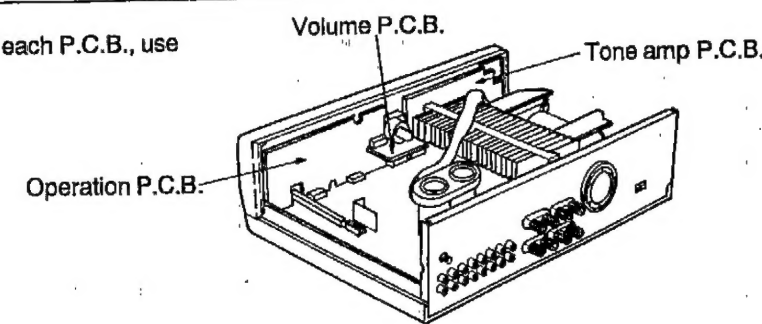


To remove each P.C.B.

Step 1
Remove the 3 screws.

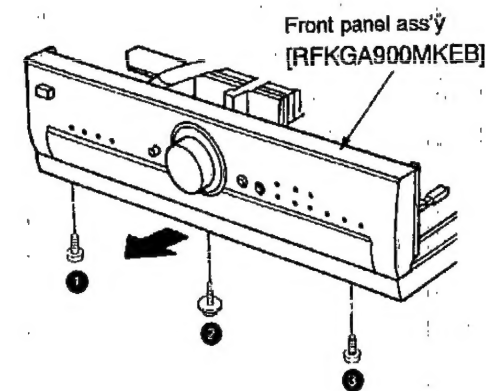


Step 4 Remove the 3 knobs.

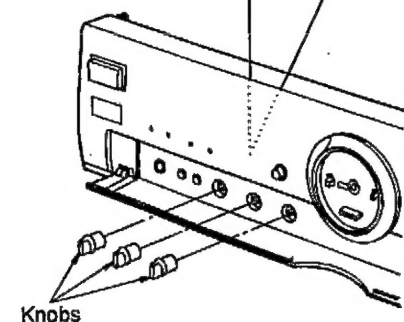
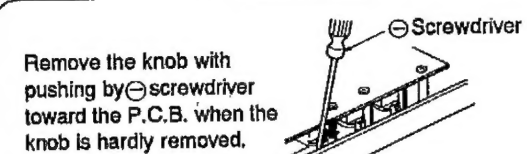


Step 2 Remove the knob and nut.

Step 3 Release the claw, and then remove the volume P.C.B.

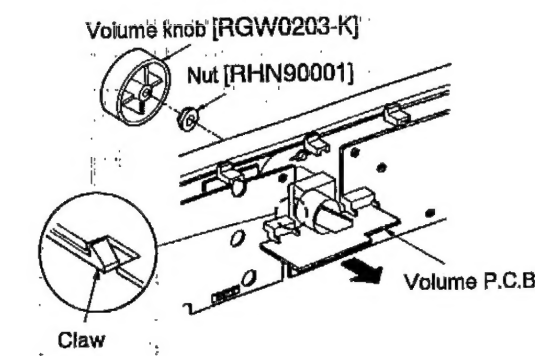


Step 5 Remove the 14 screws.

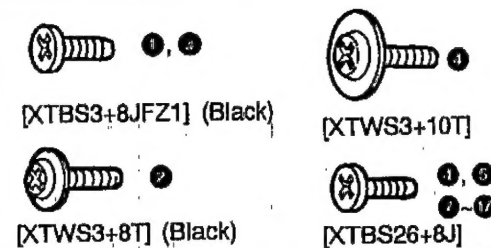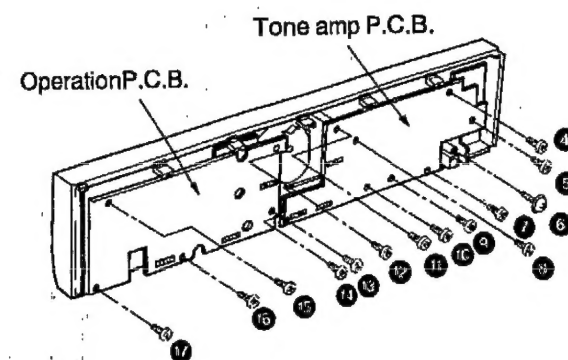


3. Checking for the Main P.C.B.

Step 1 Follow the disassembly procedure described in item 1 on page 10.



Step 2 Remove the 3 screws.

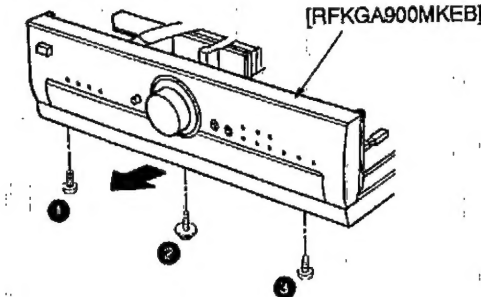

Step 4
Remove the 8 screws.

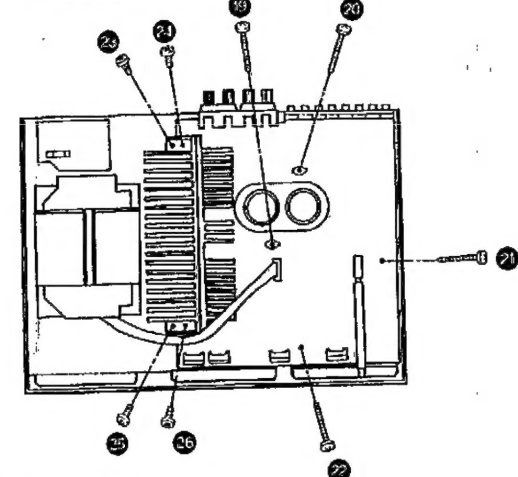


Step 7 Install the rear panel temporarily on the main P.C.B. again.

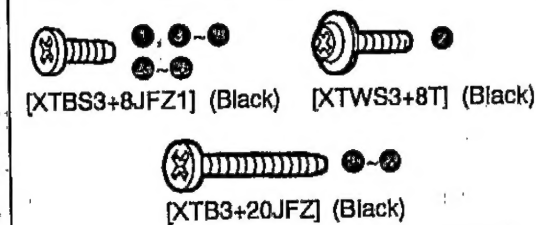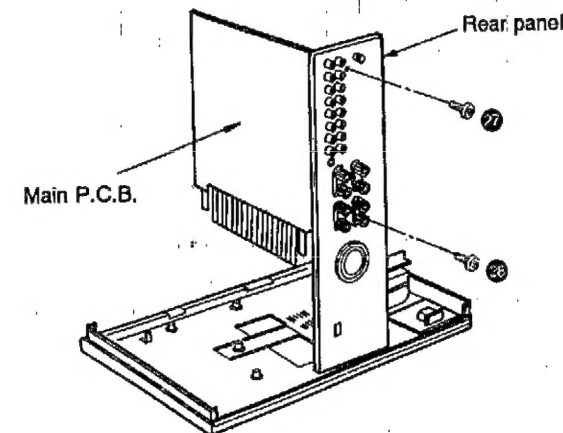


※ (E, EG) : RGR0171A-EB
※ (EB) : RGR0171E-C1C
※ (GC) : RGR0171B-CC
※ (GN) : RGR0171A-F1C

Step 3 Remove the 15 screws and connector.

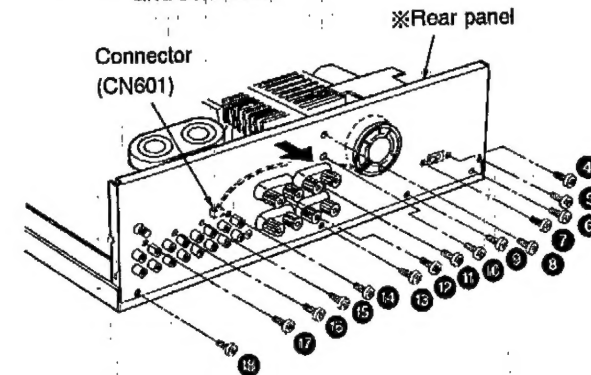


Step 5 Lift the main P.C.B. off the retention post on the bottom chassis.

Step 6 Remove the main P.C.B. in the direction of arrow ①, ②.

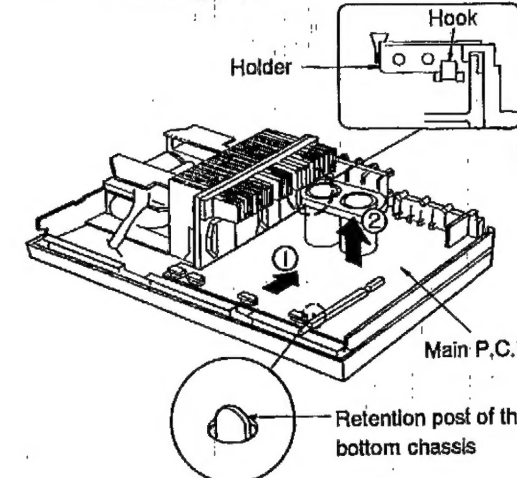


Step 8 Connect the front panel ass'y of the P.C.B. connectors to the main P.C.B. and set it as the illustration below.

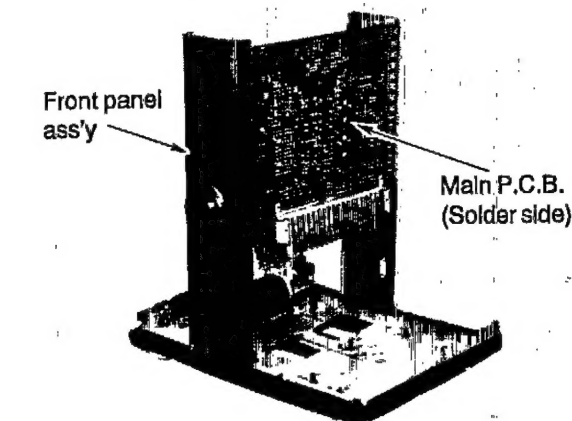


4. Replacement for power IC.

Step 1 Follow the disassembly procedure described in item 1 on page 10.

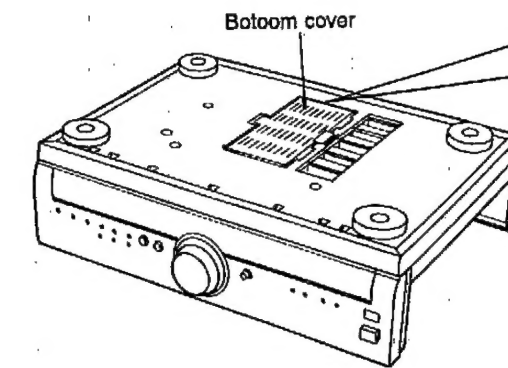


Step 2 When remove the bottom cover, cut the joints (←) as shown below. (9 joints)

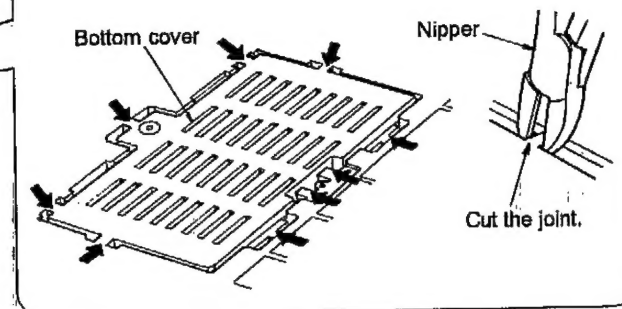

Step 4 Remove the 3 screws, and then remove the sub heat sink and angle.



Step 5 Remove the 4 screws and then remove the power IC's.

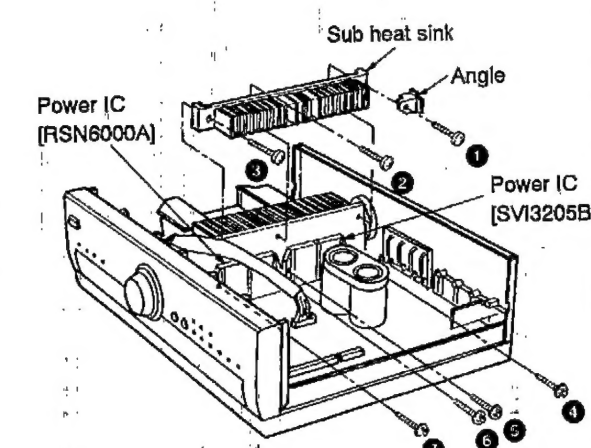


CAUTION

- After replacing the power IC, apply a sufficient quantity of compound grease (RFKX0002/SZZ0L15) between the heat sink and the power IC (Radiation of power IC).
- Tighten enough the screws (①~⑦) after replacing the power IC. Otherwise, the heat radiation works little.

Step 6 Fix the bottom cover with screw.

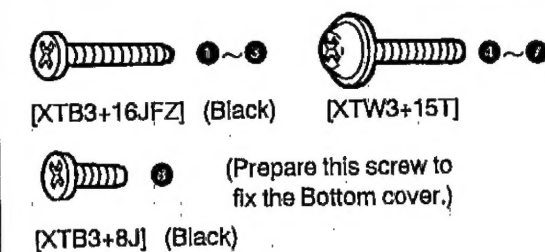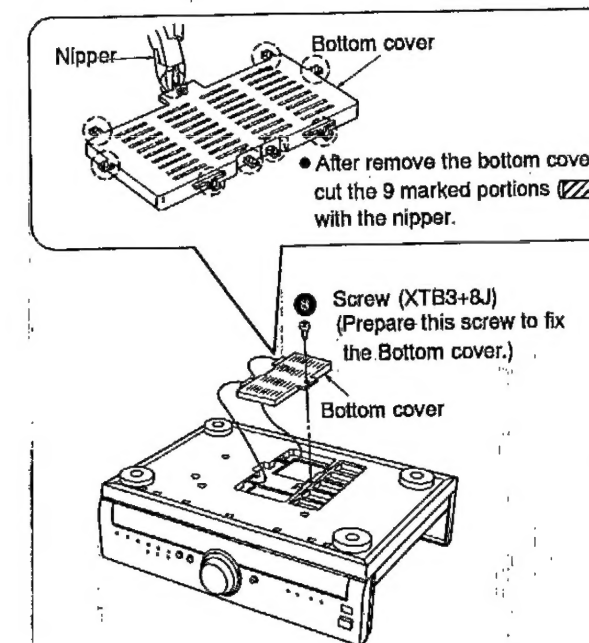


■ Schematic Diagram • Main/Operation/Switch/Volume/Tone Amp. Circuit (Parts list on page 29~32.)

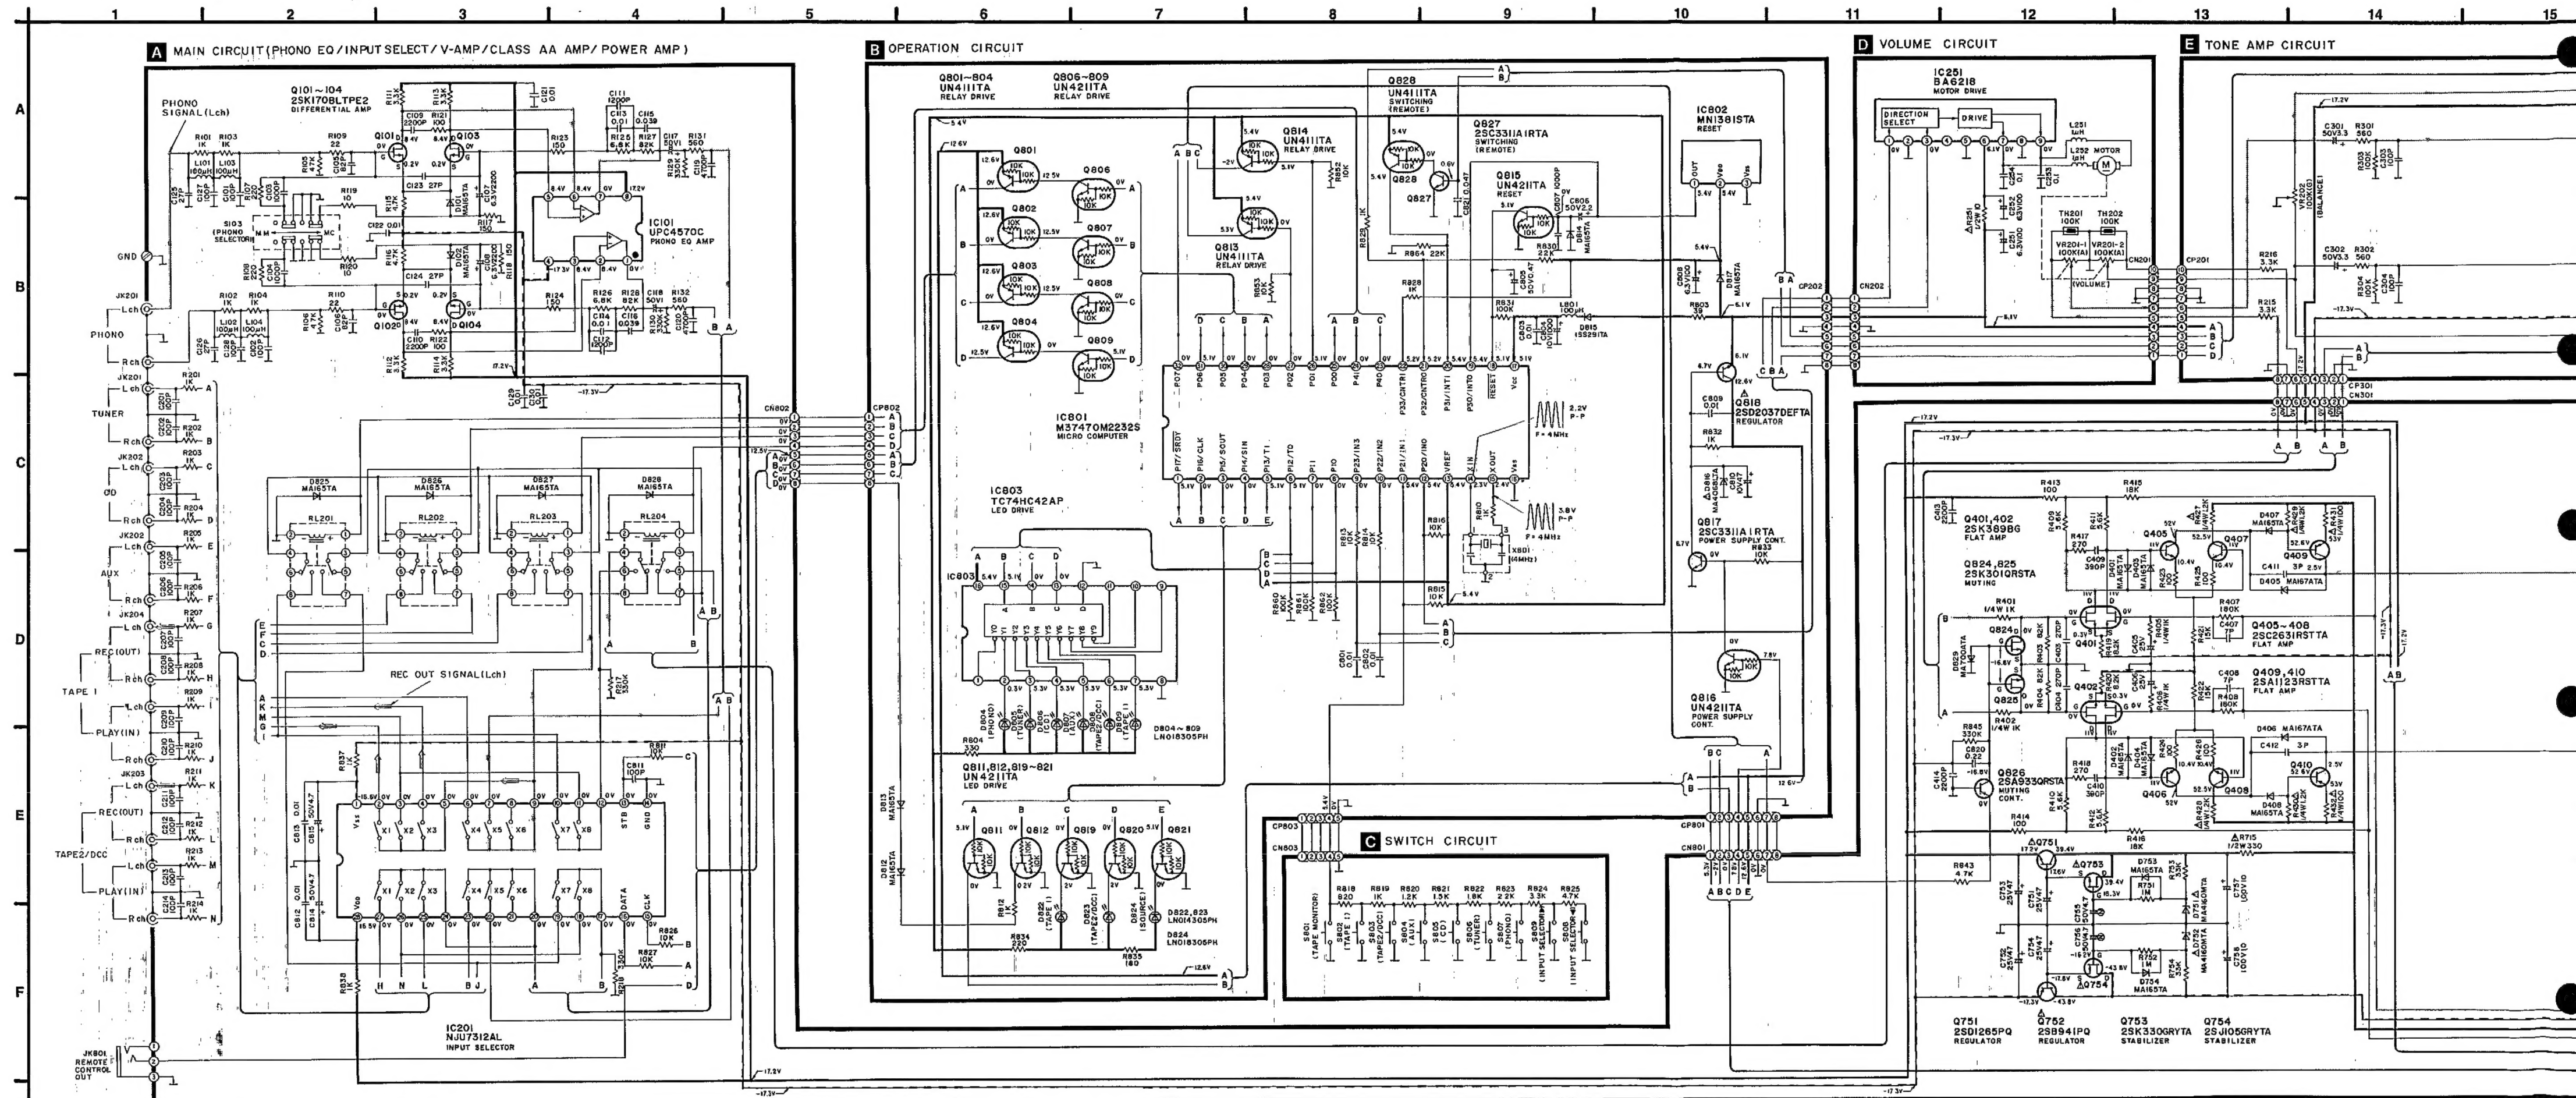

● Power Switch/Headphones Jack/Power Transformer (1) (2)/Power Supply Circuit

(Parts list on page 29~32.)

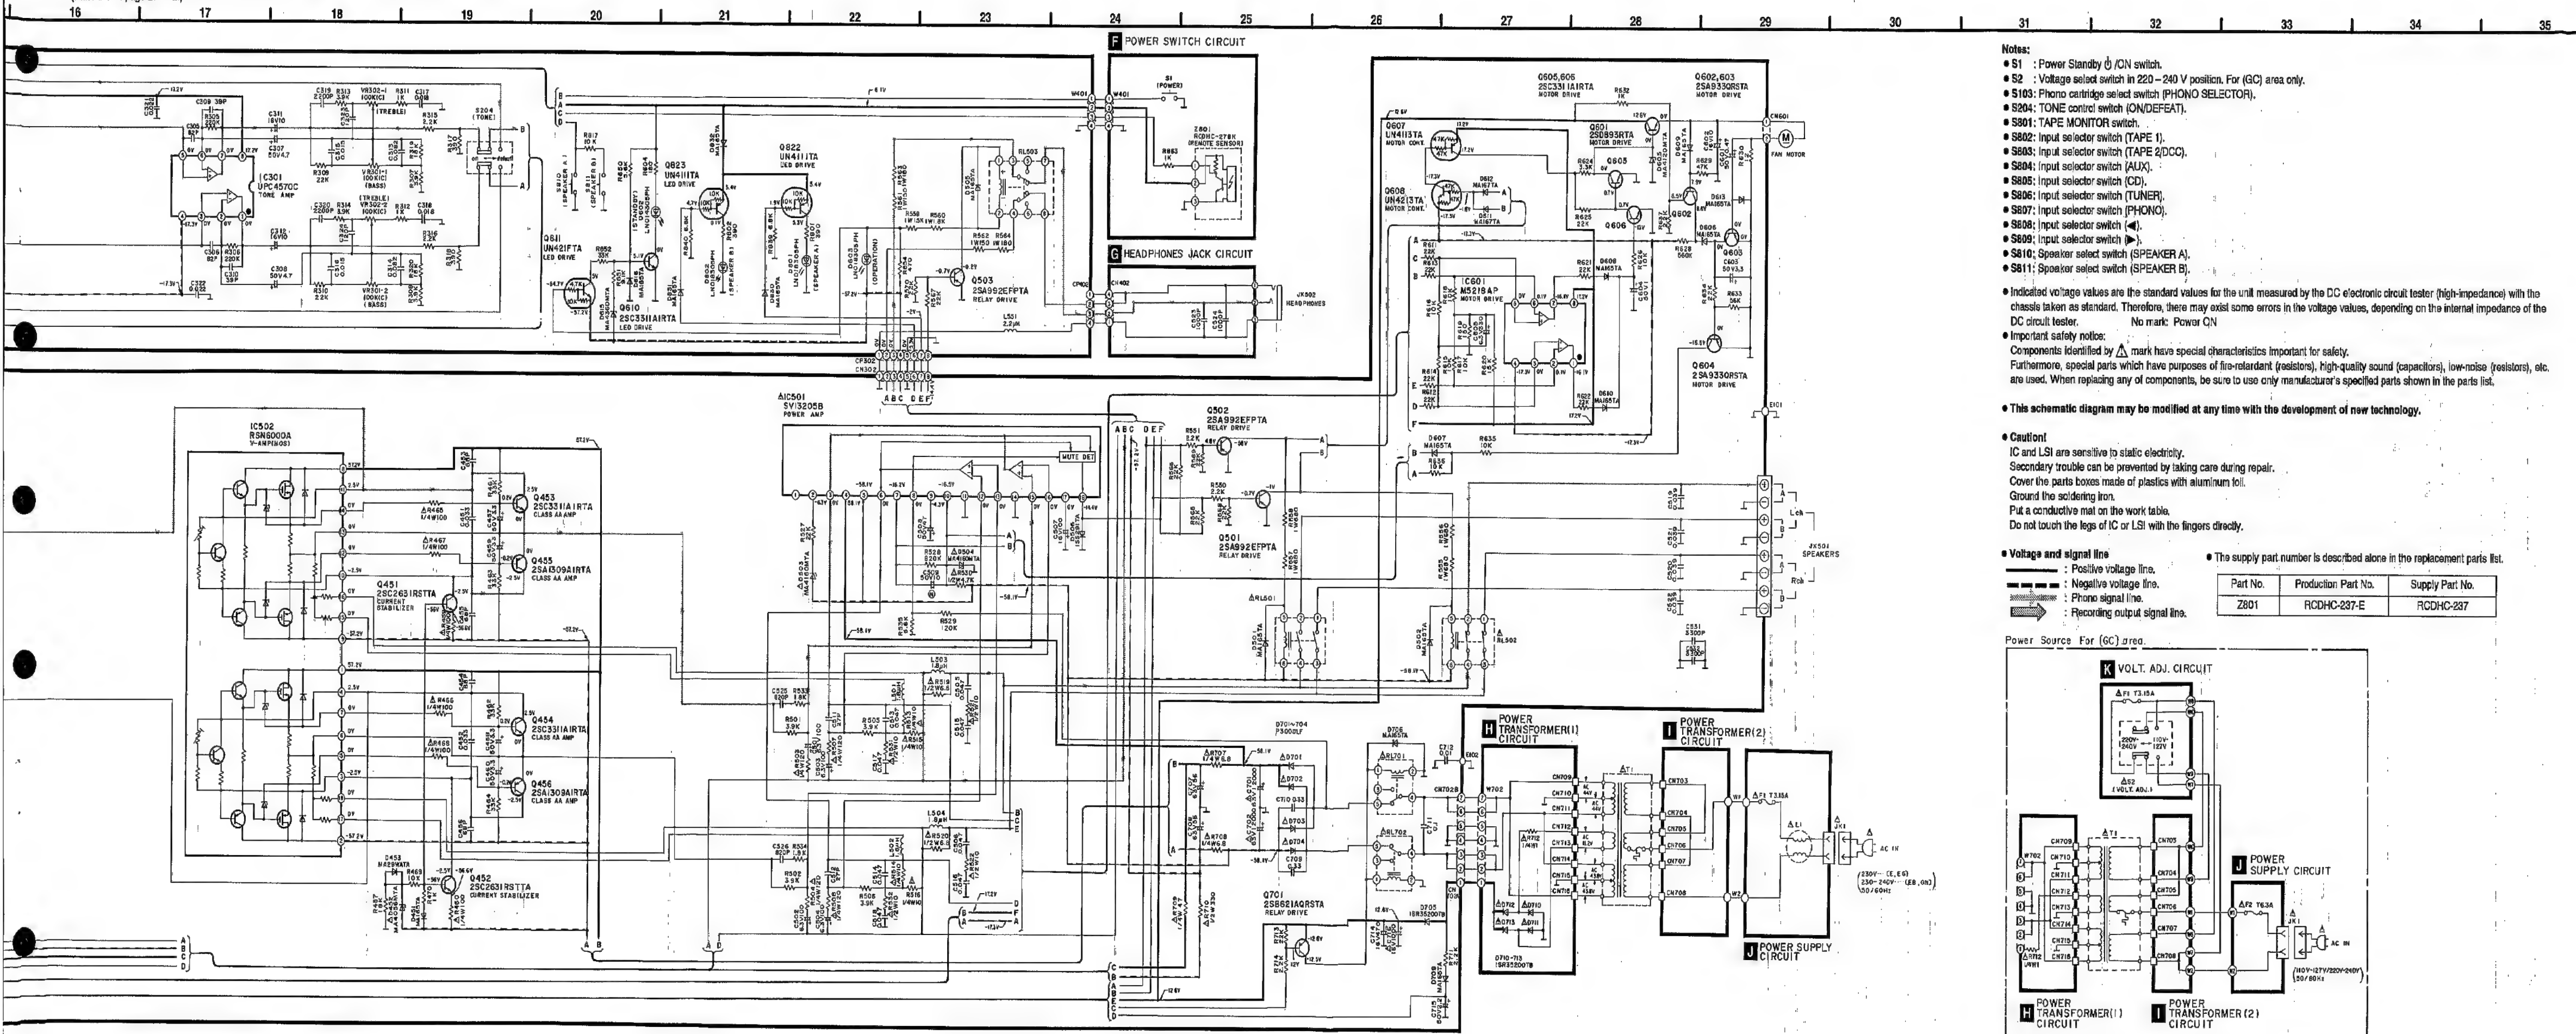

Notes:

- S1 : Power Standby (ON) switch.
- S2 : Voltage select switch in 220 ~ 240 V position. For (GC) area only.
- S103: Phono cartridge select switch (PHONO SELECTOR).
- S204: TONE control switch (ON/DEFEAT).
- S801: TAPE MONITOR switch.
- S802: Input selector switch (TAPE 1).
- S803: Input selector switch (TAPE 2/DCC).
- S804: Input selector switch (AUX).
- S805: Input selector switch (CD).
- S806: Input selector switch (TUNER).
- S807: Input selector switch (PHONO).
- S808: Input selector switch (←).
- S809: Input selector switch (→).
- S810: Speaker select switch (SPEAKER A).
- S811: Speaker select switch (SPEAKER B).

● Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester. No mark: Power ON

● Important safety notice:

Components identified by Δ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

● This schematic diagram may be modified at any time with the development of new technology.

● Caution!

IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair. Cover the parts boxes made of plastics with aluminum foil. Ground the soldering iron. Put a conductive mat on the work table. Do not touch the legs of IC or LSI with the fingers directly.


● Voltage and signal line

- : Positive voltage line.
- - - : Negative voltage line.
- : Phono signal line.
- : Recording output signal line.


● The supply part number is described alone in the replacement parts list.

Part No.	Production Part No.	Supply Part No.
Z801	RCDHC-237-E	RCDHC-237


Power Source For (GC) area.

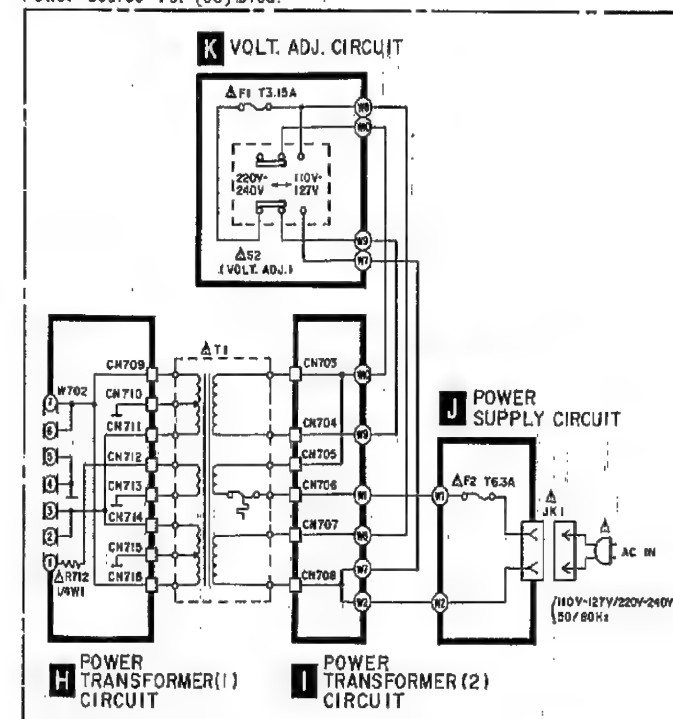


● This circuit board diagram may be modified at any time with the development of new technology

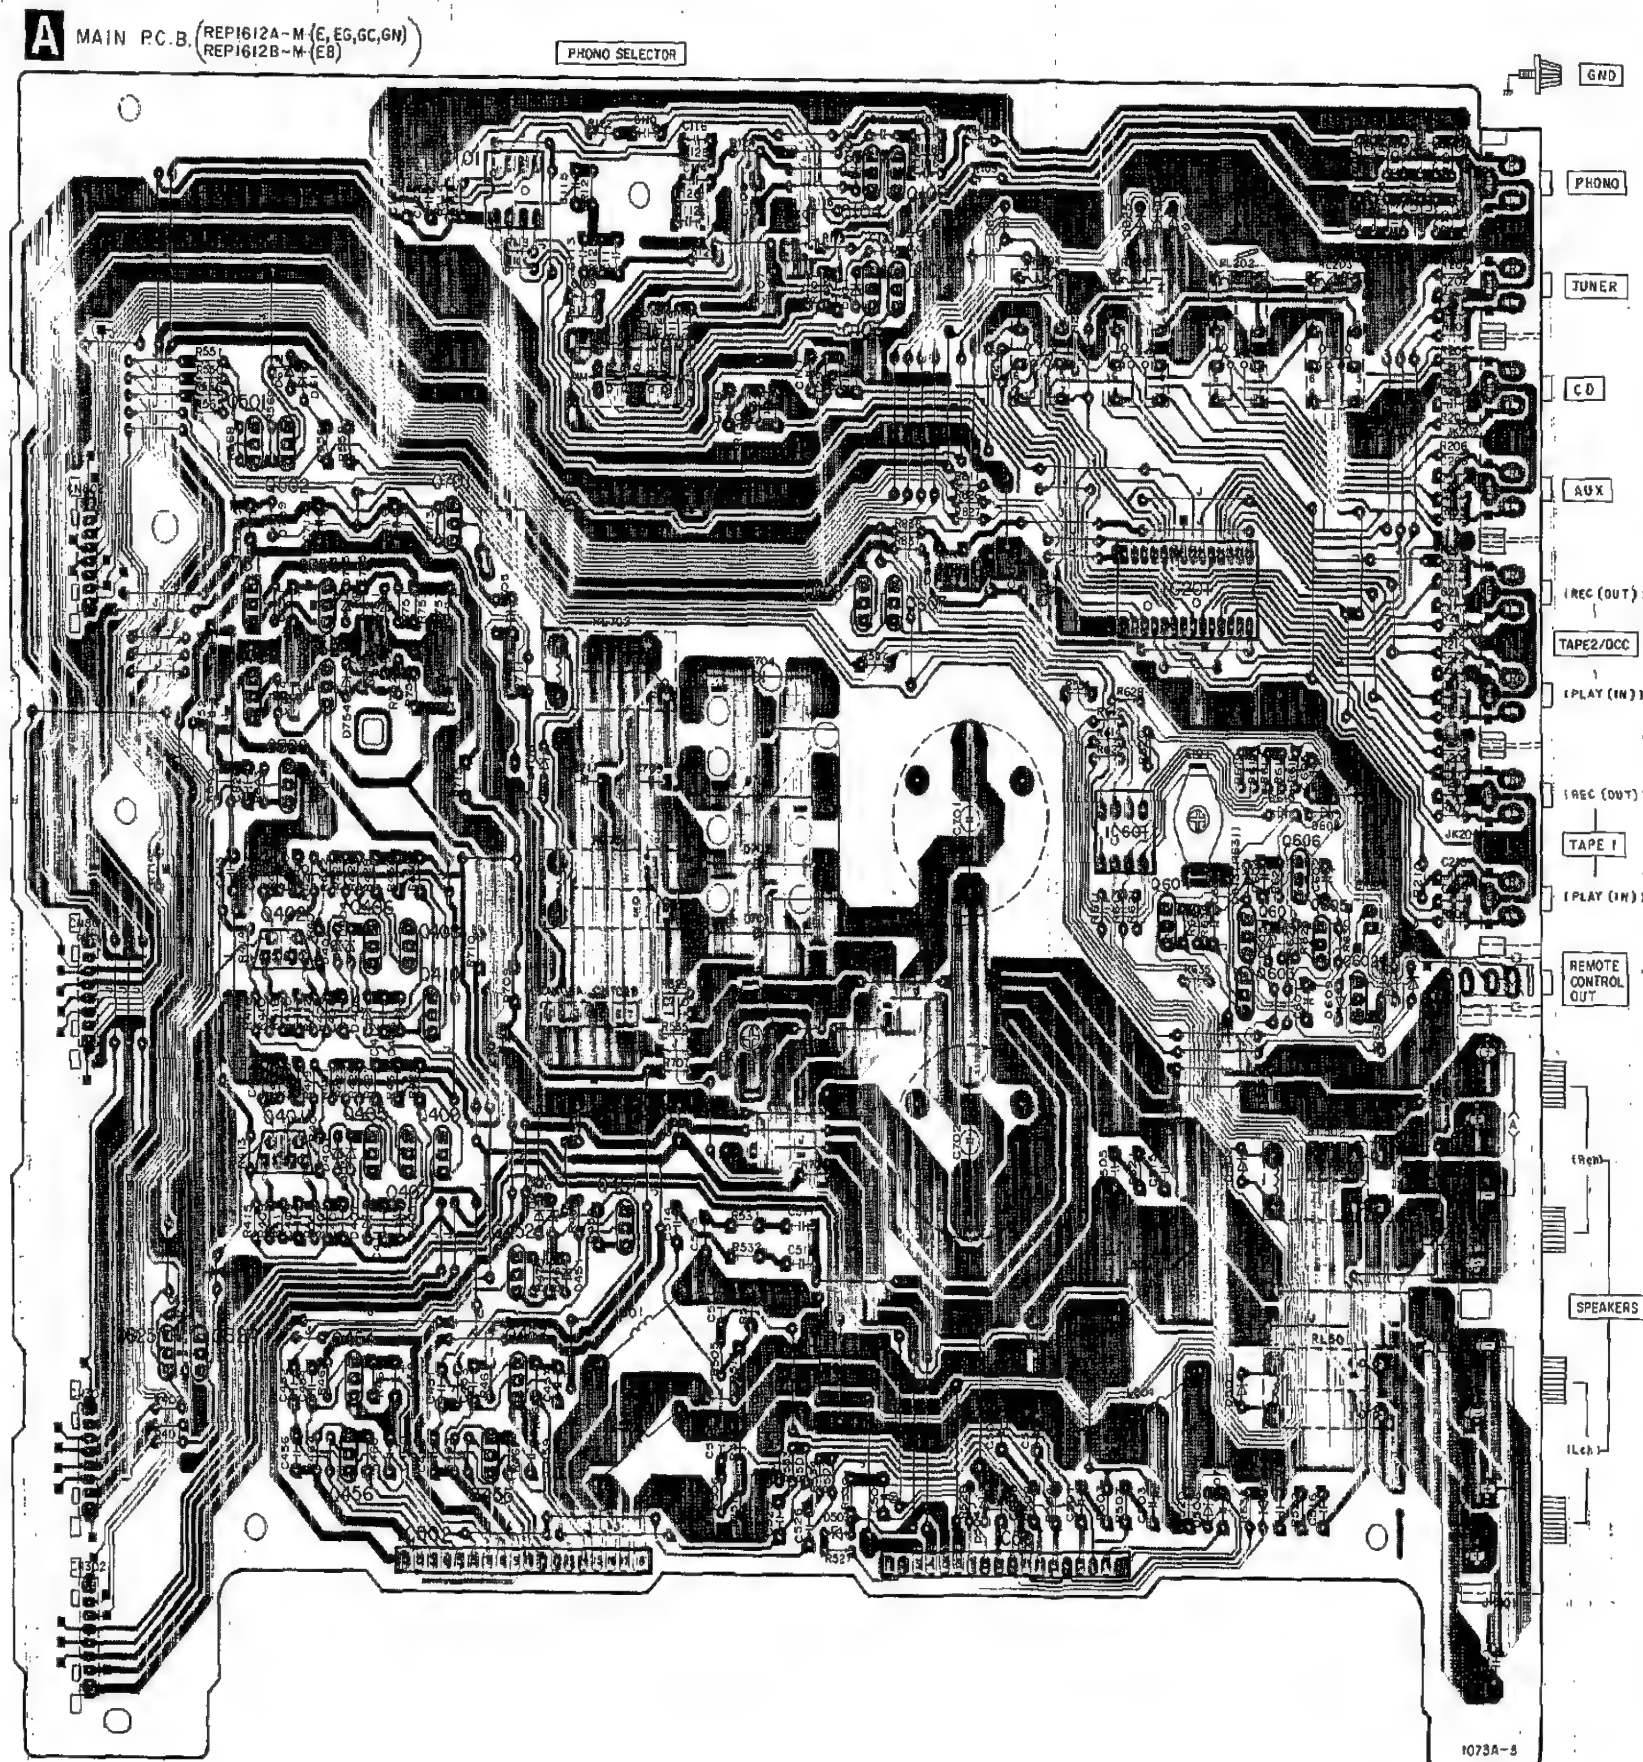


-21-

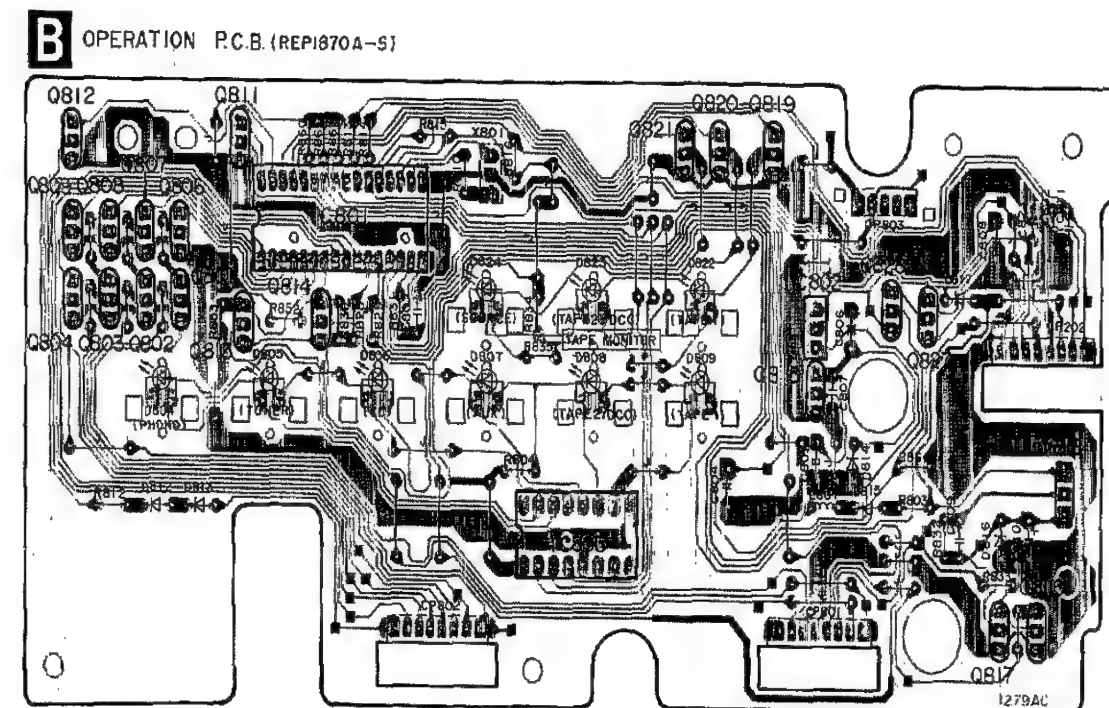


F POWER SWITCH
P.C.B. (REP1870A-S)

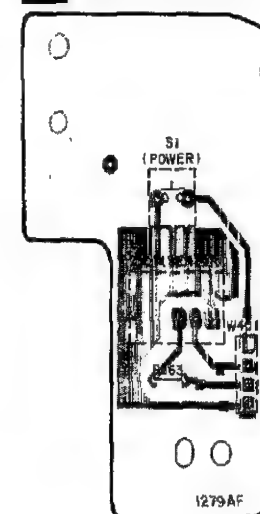


E TONE AMP P.C.B. (REF1B70A-S)

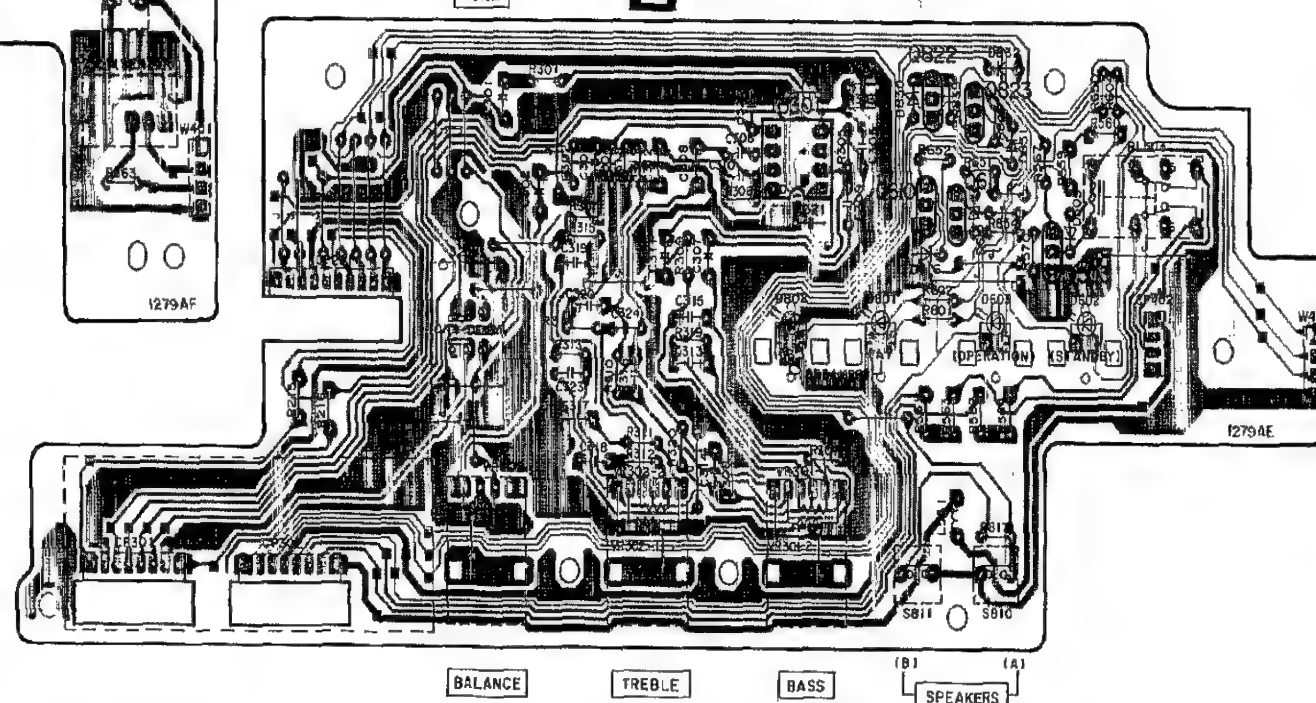


- 22 -

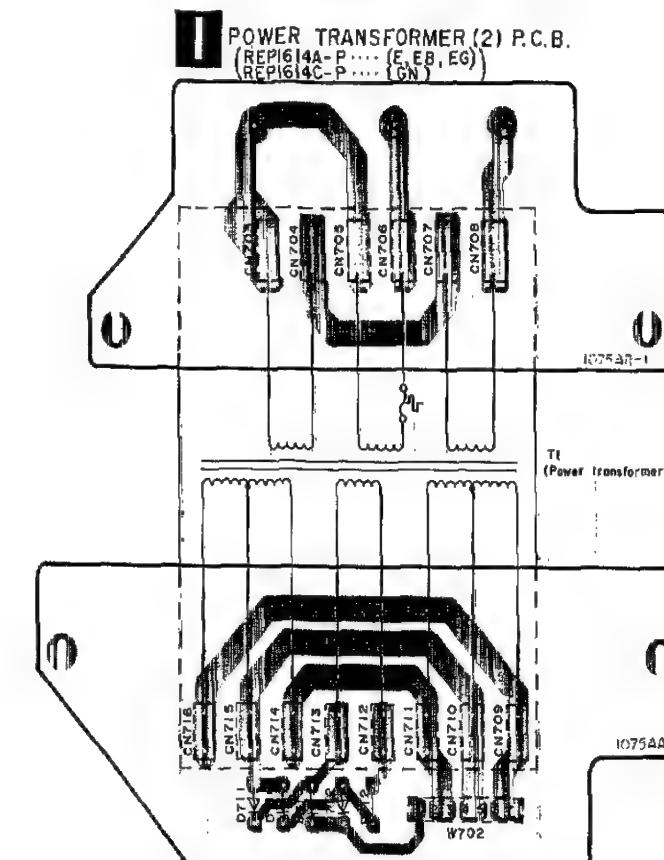


H POWER TRANSFORMER (I) P.C.B.
(REP1614A-P... [E, EB, EG])
(REP1614C-P... [GN])

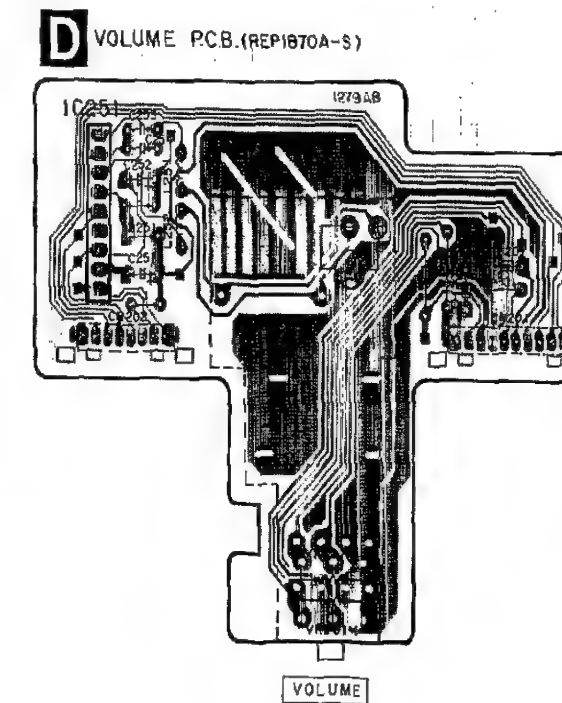


G HEADPHONES JACK P.C.B.
(REP)B70A-S)

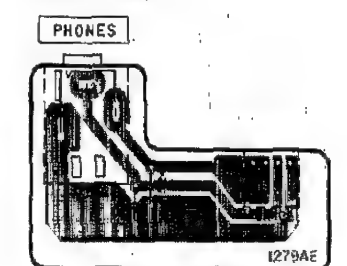

C SWITCH P.C.B.(REP1870A-S)

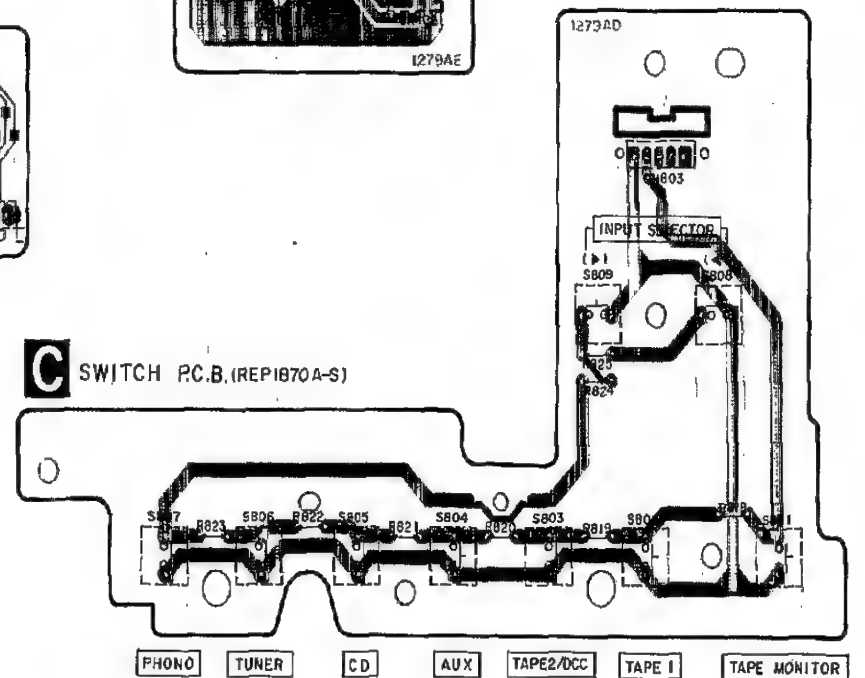

-24-

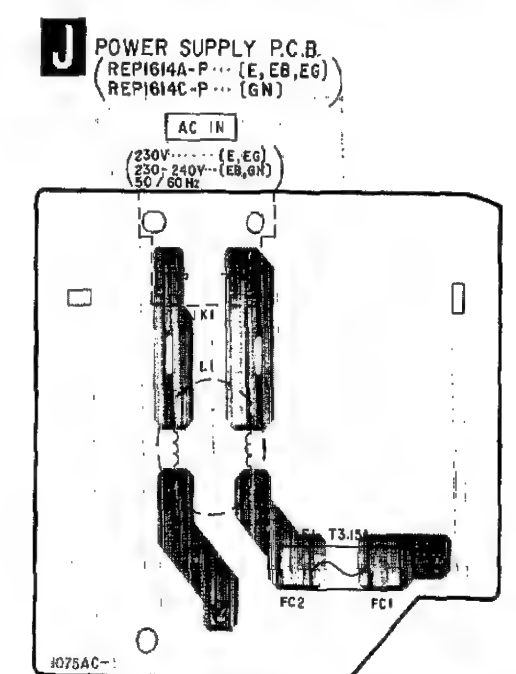


- 23 -

















Wiring Connection Diagram


21 | 22 | 23 | 24 | 25

Power Source P.C.B. For (GC) area.

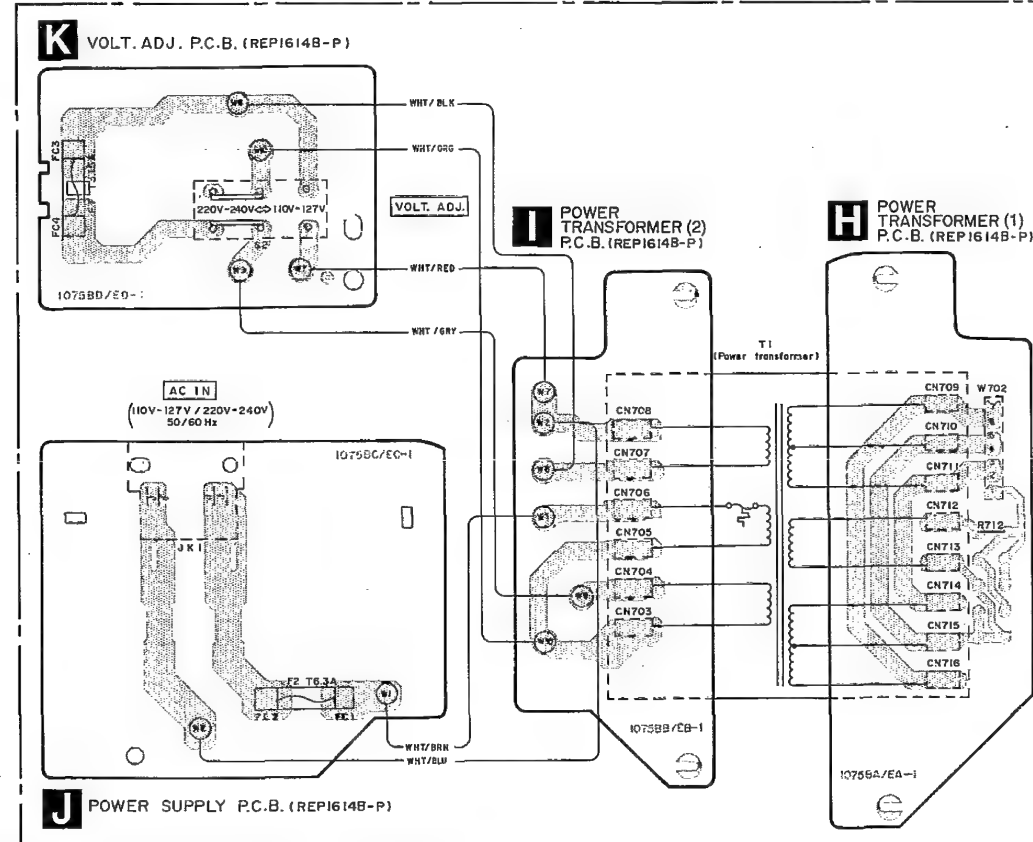


Terminal guide of IC's, transistors and diodes

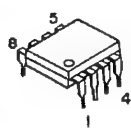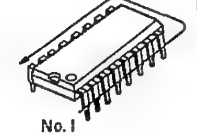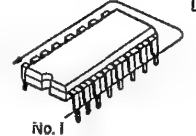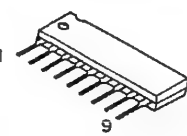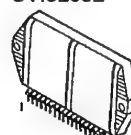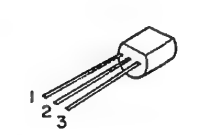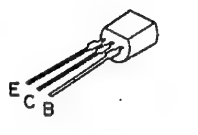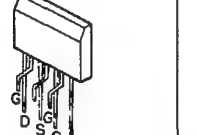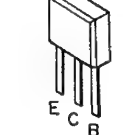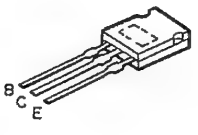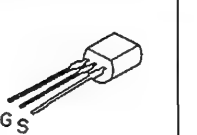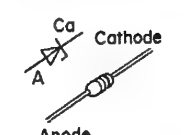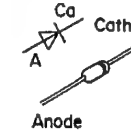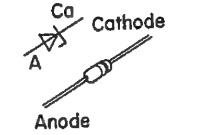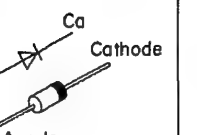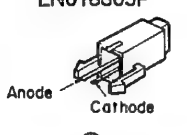M5218AP 	UPC4570C 8 Pin NJU7312AL 28Pin 	TC74HC42AP 16Pin M37470M2232S 32Pin 	BA6218 
RSN6000A SV13205B 	MN1381STA 	2SA933QRSA 2SA992EFPTA 2SA1123RSTTA 2SB621A-R 2SC2631RSTTA 2SD893RTA 	2SK389BG 
2SA1309AIRTA 2SC3311AIRTA UN421FTA UN4111 UN4113TA UN4211 UN4213 	2SB941-P 2SD1265PQ 2SD2037EFTA 	2SK170BLTPE2 2SK301QRS 	MA4056MTA MA4068L 
MA165 MA167 MA29WA MA700 1SS291TA 1SR35200TB 	MA4120 MA4160M MA4360MTA 	P300DLF 	LN014305P LN018305P 

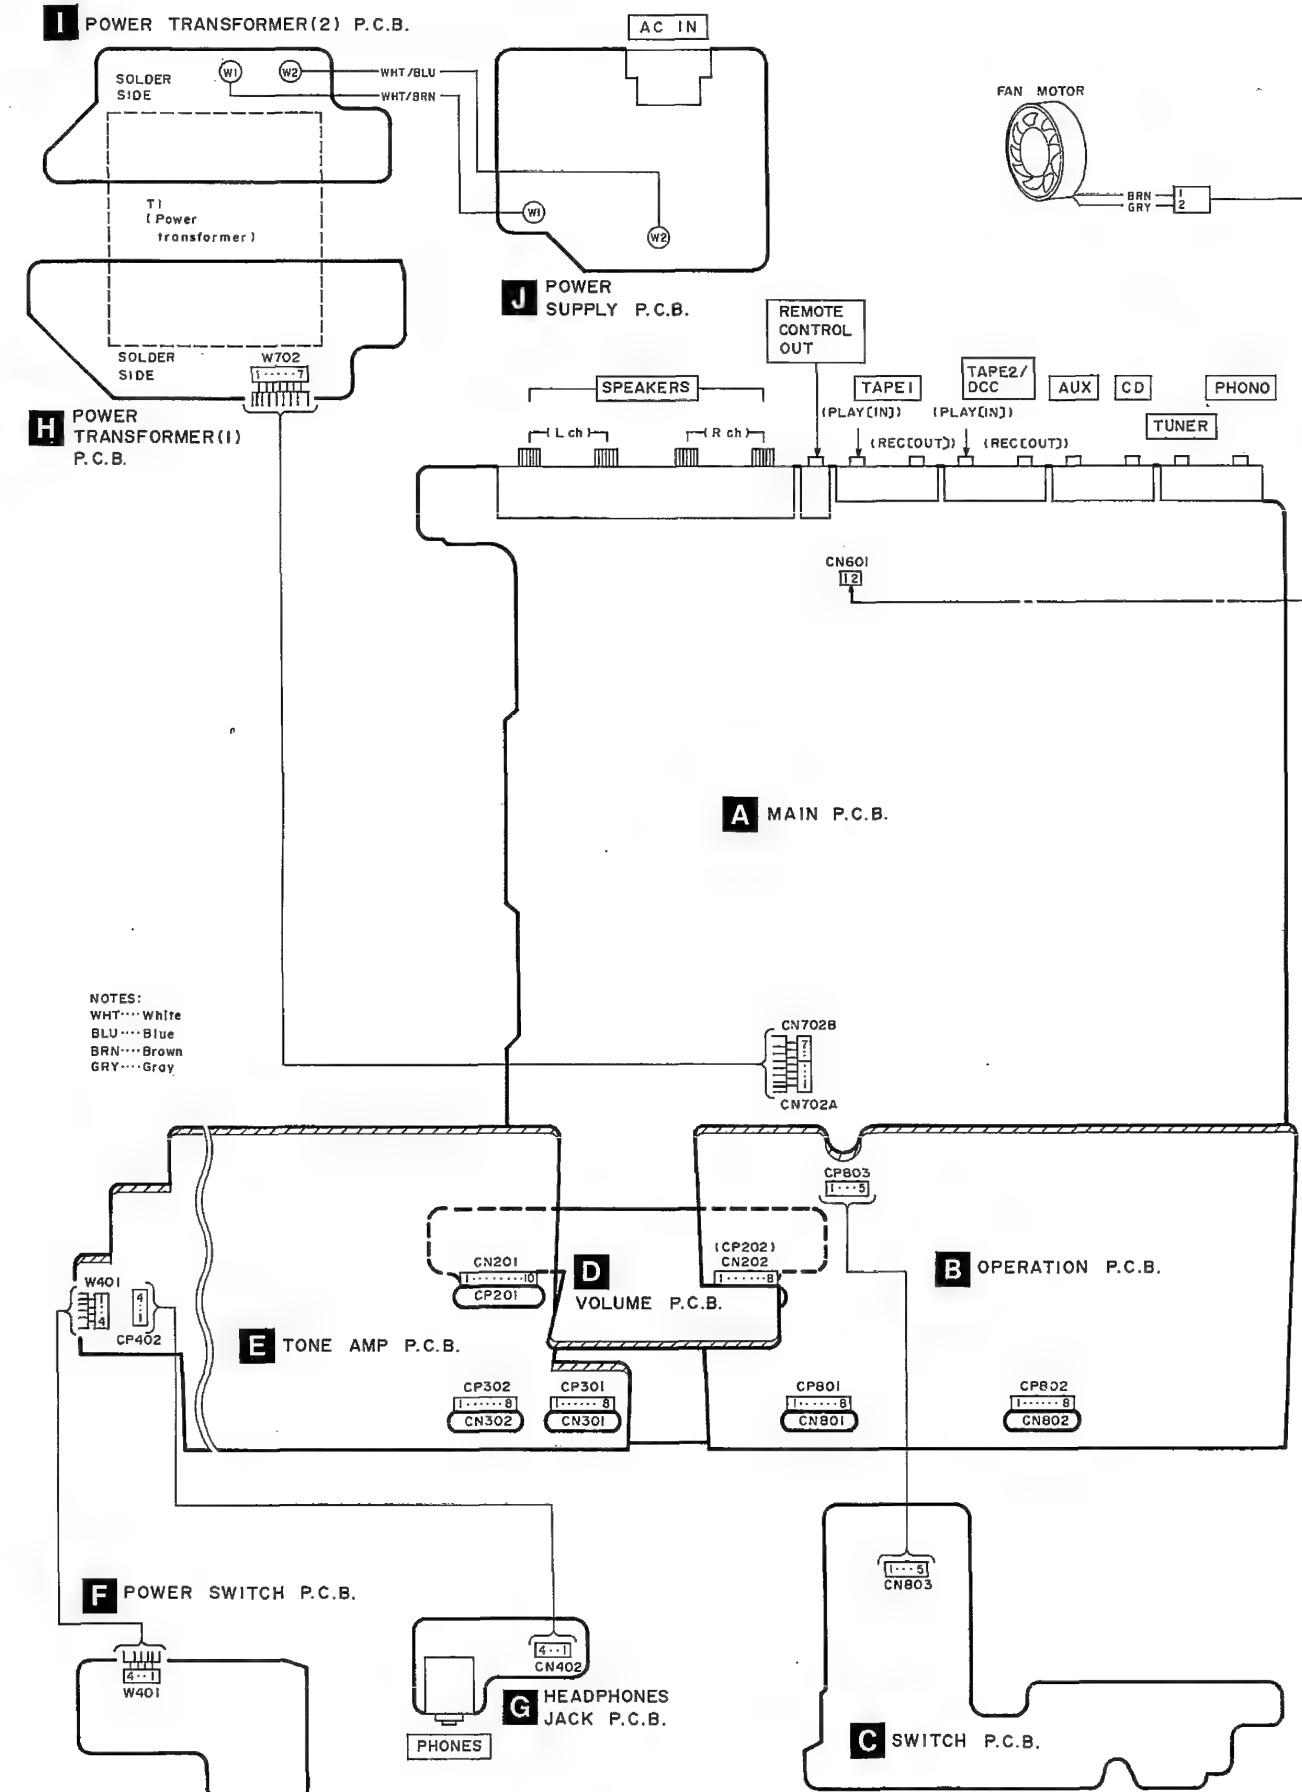

Block Diagram

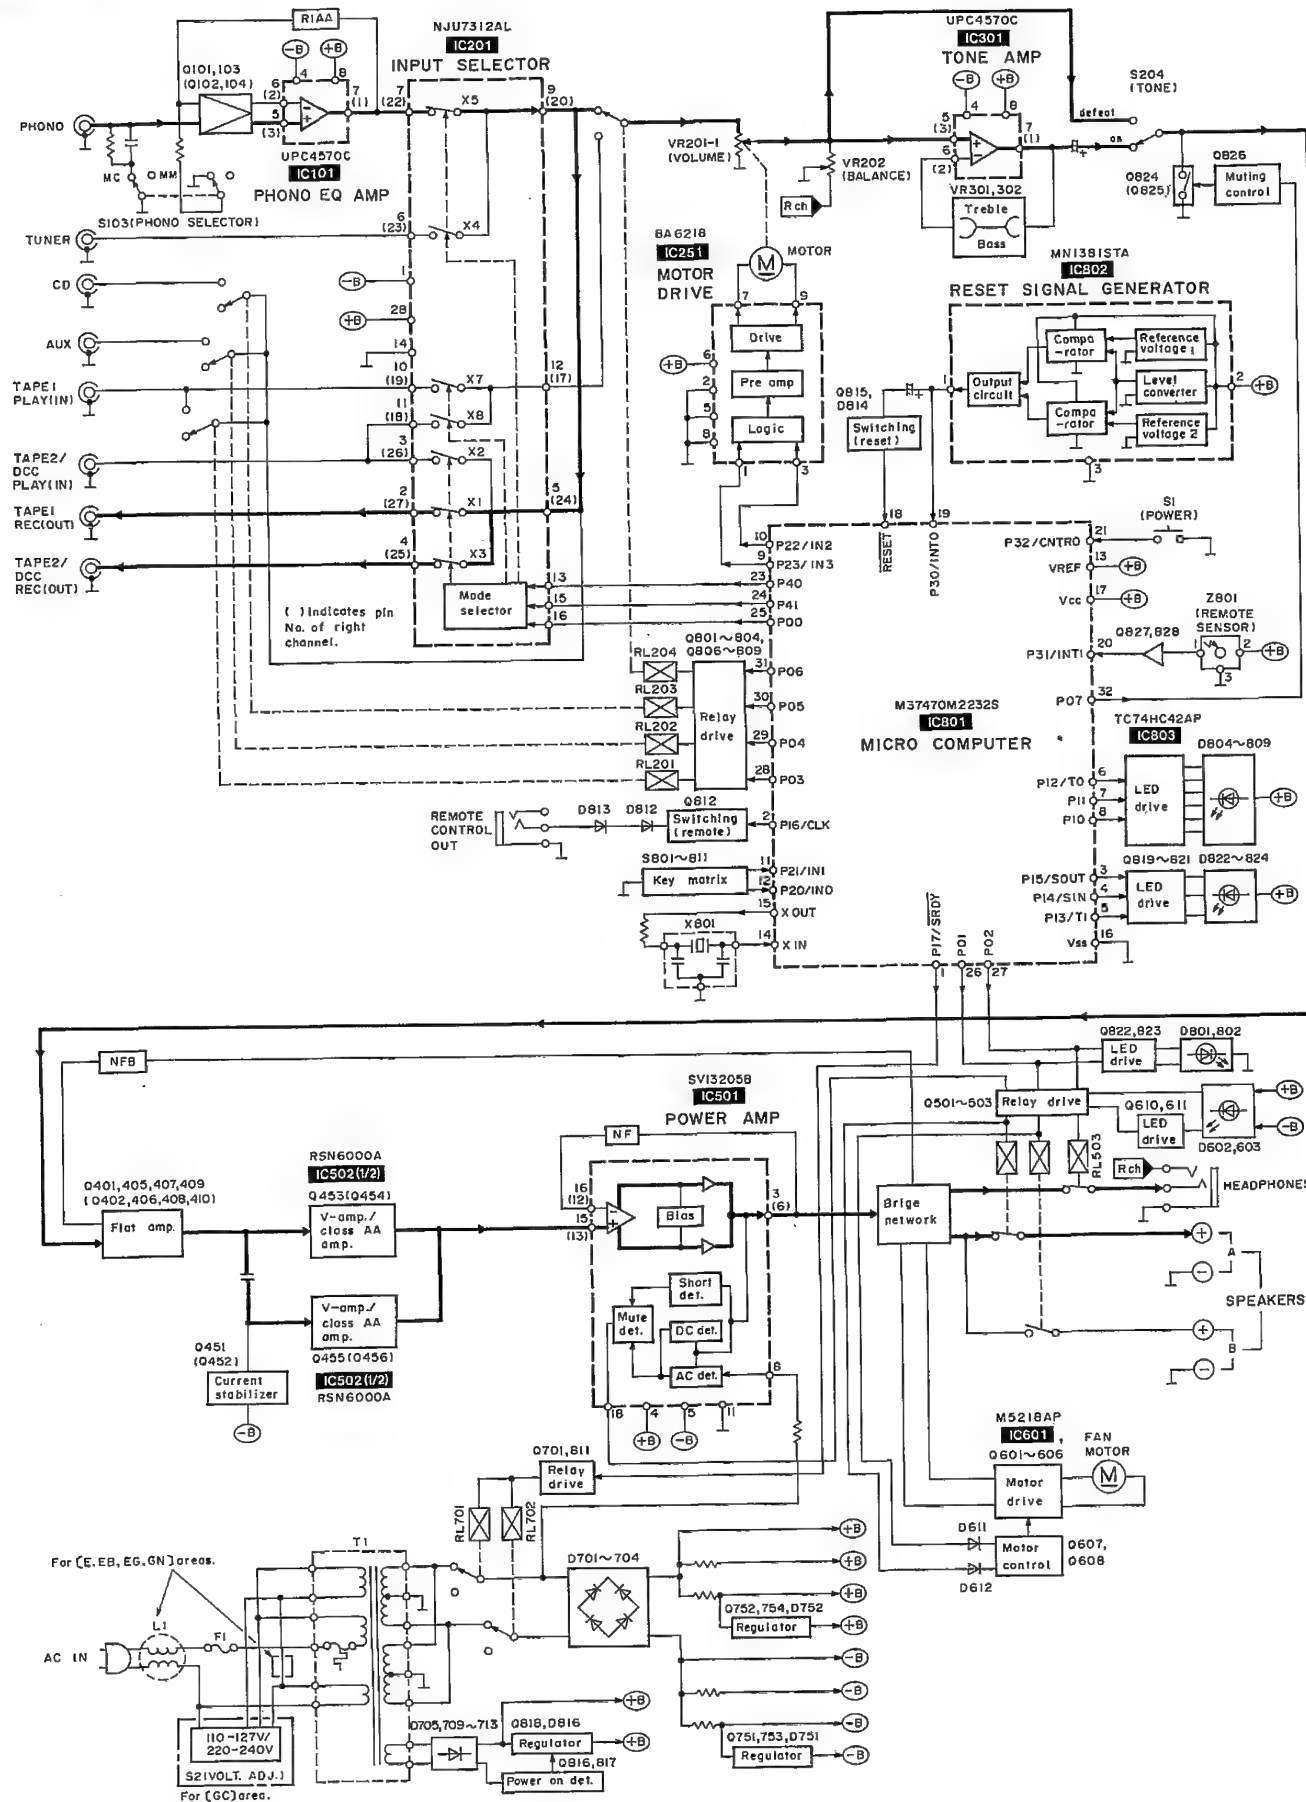

Function of IC Terminals

IC801 (M37470M2232S)

Pin No.	Terminal Name	I/O	Function
1	P17/SRDY	O	Relay (Power SW) drive signal output.
2	P16/CLK	O	Remote control signal output.
3	P15/SOUT	O	LED (TAPE 1) drive signal output.
4	P14/SIN	O	LED (TAPE 2) drive signal output.
5	P13/TI	O	LED (SOURCE) drive signal output.
6	P12/TO	O	Input select LED drive signal output.
7	P11	O	Input select LED drive signal output.
8	P10	O	Input select LED drive signal output.
9	P23/IN3	O	Motor (volume control) drive signal output.
10	P22/IN2	O	Motor (volume control) drive signal output.
11	P21/IN1	I	Input select switch signal input.
12	P20/IN0	I	Speaker select switch (SPEAKER A, SPEAKER B) signal input.
13	VREF	I	Reference voltage input.
14	XIN	I	Oscillator signal I/O terminal. (4 MHz)
15	XOUT	O	Oscillator signal I/O terminal. (4 MHz)
16	VSS	—	GND terminal.
17	VCC	I	Power supply (+5V).

Pin No.	Terminal Name	I/O	Function
18	RESET	I	System reset signal input.
19	P30/INTO	I	Back-up detect signal input.
20	P31/INTI	I	Remote control receive signal input.
21	P32/CNRO	I	Power SW signal input.
22	P33/CNRI	—	No used. Connected to reference voltage line.
23	P40	O	Strobe signal output for Input Selector IC (IC201).
24	P41	O	Clock signal output for Input Selector IC (IC201).
25	P00	O	Data signal output for Input Selector IC (IC201).
26	P01	O	SPEAKER A select signal output.
27	P02	O	SPEAKER B select signal output.
28	P03	O	Selector Relay drive signal output.
31	P06	O	Selector Relay drive signal output.
32	P07	O	Audio muting control signal output.

Replacement Parts List

Notes: *Important safety notice:

Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)

Parts without these indications can be used for all areas.

*Remote Control Ass'y: Supply period for three years from termination of production.

*The "(SF)" mark denotes the standard part.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		Q824, 825	2SK301QRS	TRANSISTOR	
				Q826	2SA933QRSTA	TRANSISTOR	
				Q827	2SC3311AIRTA	TRANSISTOR	
				Q828	UN4111	TRANSISTOR	
						DIODE(S)	
IC101	UPC4570C	I. C, PHONO EQ. AMP.		D101, 102	MA165	DIODE	
IC201	NJU7312AL	I. C, INPUT SELECTOR		D401-404	MA165	DIODE	
IC251	BA6218	I. C, VOLUME MOTOR DRIVE		D405, 406	MA167	DIODE	
IC301	UPC4570C	I. C, TONE AMP.		D407, 408	MA165	DIODE	
IC501	SV13205B	I. C, POWER AMP.	Δ	D451	MA165	DIODE	
IC502	RSN6000A	I. C, V-AMP.		D452	MA4056MTA	DIODE	Δ
IC601	M5218AP	I. C, FAN MOTOR DRIVE		D453	MA29WA	DIODE	
IC801	M37470M2232S	I. C, MICRO COMPUTER		D501, 502	MA165	DIODE	
IC802	MN1381STA	I. C, RESET		D503, 504	MA4160M	DIODE	Δ
IC803	TC74HC42AP	I. C, LED DRIVE		D505	MA165	DIODE	
		TRANSISTOR(S)		D506	1SS291TA	DIODE	
				D602, 603	LN018305PH	L. E. D.	
Q101-104	2SK170BLTPEZ	TRANSISTOR		D605	MA4120	DIODE	
Q401, 402	2SK389BG	TRANSISTOR		D606-610	MA165	DIODE	
Q405-408	2SC2631RSTTA	TRANSISTOR		D611, 612	MA167	DIODE	
Q409, 410	2SA1123RSTTA	TRANSISTOR		D613	MA165	DIODE	
Q451, 452	2SC2631RSTTA	TRANSISTOR		D615	MA4360MTA	DIODE	
Q453, 454	2SC3311AIRTA	TRANSISTOR		D616	MA165	DIODE	
Q455, 456	2SA1309AIRTA	TRANSISTOR		D701-704	P300DLF	DIODE	Δ
Q501-503	2SA992EFPTA	TRANSISTOR		D705	1SR35200TB	DIODE	
Q601	2SD893R	TRANSISTOR		D706	MA165	DIODE	
Q602	2SA933QRSTA	TRANSISTOR		D709	MA165	DIODE	
Q603, 604	2SA933QRSTA	TRANSISTOR		D710-713	1SR35200TB	DIODE	Δ (E, EB, EG, GN)
Q605, 606	2SC3311AIRTA	TRANSISTOR		D751, 752	MA4160M	DIODE	Δ
Q607	UN4113TA	TRANSISTOR		D753, 754	MA165	DIODE	
Q608	UN4213	TRANSISTOR		D801, 802	LN018305PH	L. E. D.	
Q610	2SC3311AIRTA	TRANSISTOR		D804-809	LN018305PH	L. E. D.	
Q611	UN421FTA	TRANSISTOR		D812-814	MA165	DIODE	
Q701	2SB621A-R	TRANSISTOR		D815	1SS291TA	DIODE	
Q751	2SD1265PQ	TRANSISTOR	Δ	D816	MA4068L	DIODE	Δ
Q752	2SB941-P	TRANSISTOR	Δ	D817	MA165	DIODE	
Q753	2SK330GRYTA	TRANSISTOR	Δ	D822, 823	LN014305PH	L. E. D.	
Q754	2SJ105GRYTA	TRANSISTOR	Δ	D824	LN018305PH	L. E. D.	
Q801-804	UN4111	TRANSISTOR		D825-828	MA165	DIODE	
Q806-809	UN4211	TRANSISTOR		D829	MA700	DIODE	
Q811, 812	UN4211	TRANSISTOR		D830-832	MA165	DIODE	
Q813, 814	UN4111	TRANSISTOR				VARIABLE RESISTOR(S)	
Q815, 816	UN4211	TRANSISTOR					
Q817	2SC3311AIRTA	TRANSISTOR					
Q818	2SD2037DEFTA	TRANSISTOR	Δ				
Q819-821	UN4211	TRANSISTOR					
Q822, 823	UN4111	TRANSISTOR					

Ref. No.	Part No.	Part Name & Description	Remarks
VR201	EWCPG3020A15	V. R. MAIN VOLUME CONTROL	
VR202	EVJ02QF01G15	V. R. BALANCE	
VR301, 302	EVJYA1F01C15	V. R. BASS/TREBLE CONTROL	
		THERMISTOR(S)	
TH201, 202	ERTD2ZHL104T	THERMISTOR	
		COMPONENT COMBINATION(S)	
Z801	RCDHC-278N	REMOTE SENSOR	
		COIL(S)	
L1	RLQZ271M	COIL	△ (E, EB, EG, GN)
L101-104	ELEXT101KA9	COIL	
L251, 252	ELEXT1R0KA9	COIL	
L501-504	SLQY18G-10	COIL	
L551	ELEPK2R2MA	COIL	
L801	ELEXT101KA9	COIL	
		TRANSFORMER(S)	
T1	RTP7L5B001-W	POWER TRANSFORMER	△ (EB, GC, GN)
T1	RTP7L5E001-W	POWER TRANSFORMER	△ (E, EG)
		OSCILLATOR(S)	
X801	EF0GC4004A4	OSCILLATOR (4MHz)	
		FUSE(S)	
F1	XBA2C31TB0	FUSE, 250V, 3. 15A	△
F2	XBA2C63TB0	FUSE, 250V T6. 3A	△ (GC)
		SWITCH(ES)	
S1	EVQ21405R	SW, POWER	
S2	ESD26200A	SW, VOLTAGE SELECTOR	△ (GC)
S103	RSP2D010-J	SW, PHONO SELECTOR	
S204	ESB68113	SW, TONE ON/DEFEAT	
S801	EVQ21405R	SW, TAPE MONITOR	
S802	EVQ21405R	SW, INPUT SELECTOR(TAPE1)	
S803	EVQ21405R	SW, INPUT (TAPE2/DCC)	
S804	EVQ21405R	SW, INPUT SELECTOR(AUX)	
S805	EVQ21405R	SW, INPUT SELECTOR(CD)	
S806	EVQ21405R	SW, INPUT SELECTOR(TUNER)	
S807	EVQ21405R	SW, INPUT SELECTOR(PHONO)	
S808	EVQ21405R	SW, INPUT SELECTOR(LEFT)	
S809	EVQ21405R	SW, INPUT SELECTOR(RIGHT)	
S810	EVQ21405R	SW, SPEAKER(A)	
S811	EVQ21405R	SW, SPEAKER(B)	


Ref. No.	Part No.	Part Name & Description	Remarks
		CONNECTOR(S)	
CN201	RJU003K010M1	SOCKET (10P)	
CN202	RJU003K008M1	SOCKET (8P)	
CN301, 302	RJU003K008M1	SOCKET (8P)	
CN402	RJU057W004	SOCKET (4P)	
CN601	SJT3213	CONNECTOR (2P)	
CN703-716	RJS1A1101T1	SOCKET (1P)	
CN801, 802	RJU003K008M1	SOCKET (8P)	
CN803	RJU066H05	SOCKET (5P)	
CN702A	RJS1A6604	CONNECTOR (4P)	
CN702B	RJS1A6603	CONNECTOR (3P)	
CP201	RJT003K010-1	CONNECTOR (10P)	
CP202	RJT003K008-1	CONNECTOR (8P)	
CP301, 302	RJT003K008-1	CONNECTOR (8P)	
CP402	RJT057W004-1	CONNECTOR (4P)	
CP801, 802	RJT003K008-1	CONNECTOR (8P)	
CP803	RJT066H05A	CONNECTOR (5P)	
		JACK(S)	
JK1	SJS9236	AC INLET	△ (E, EB, EG, GC)
JK1	SJSD16	AC INLET	△ (GN)
JK201	SJF3069N	INPUT TERMINAL (PHONO/TUNER)	
JK202	SJF3069N	INPUT TERMINAL (CD/AUX)	
JK203	SJF3069N	IN/OUTPUT (TAPE2/DCC)	
JK204	SJF3069N	IN/OUTPUT (TAPE1)	
JK501	RJH4801-2	SPEAKERS TERMINAL	(EB)
JK501	RJH4801-1	SPEAKERS TERMINAL	(E, EG, GC, GN)
JK502	QJA0455ZC-A	HEADPHONES JACK	
JK801	RJJ33TR01	REMOTE CONTROL OUT JACK	
		EARTH TERMINAL(S)	
E101, 102	SNE1004-2	GND PLATE	
E103	SMC949	SHIELD PLATE	
E201	RSC0340	SHIELD PLATE	
		FUSE HOLDER(S)	
FC1, 2	EYF52BC	FUSE HOLDER	
FC3, 4	SJT388	FUSE HOLDER	(GC)
		RELAY(S)	
RL201-204	RSY0020M-R	RELAY	
RL501, 502	RSY0013-0	RELAY	△
RL503	RSY0020M-R	RELAY	
RL701, 702	RSY0019M-0	RELAY	△

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS	R470	ERDS2TJ102	1/4W 1K	R715	ERDS1FVJ331T	1/2W 330 Δ
			R501, 502	ERDS2TJ392T	1/4W 3.9K	R751, 752	ERDS2TJ105T	1/4W 1M
			R503, 504	ERDAF2VJ121T	1/4W 120 Δ	R753, 754	ERDS2TJ333	1/4W 33K
R101-104	ERDS2TJ102	1/4W 1K	R505, 506	ERDS2TJ392T	1/4W 3.9K	R801, 802	ERDS2TJ391	1/4W 390
R105, 106	ERDS2TJ473	1/4W 47K	R507, 508	ERDAF2VJ121T	1/4W 120 Δ	R803	ERDS2TJ390	1/4W 39
R107, 108	ERDS2TJ221	1/4W 220	R513-516	ERDAF2VJ100T	1/4W 10 Δ	R804	ERDS2TJ331	1/4W 330
R109, 110	ERDS2TJ220T	1/4W 22	R519, 520	ERDS1FVJ6R8T	1/2W 6.8 Δ	R810	ERDS2TJ102	1/4W 1K
R111-114	ERDAS3G332T	1/4W 3.3K	R521, 522	ERDS1FVJ100T	1/2W 10 Δ	R811	ERDS2TJ103	1/4W 10K
R115, 116	ERDAS3G472T	1/4W 4.7K	R527	ERDS2TJ223	1/4W 22K	R812	ERDS2TJ102	1/4W 1K
R117, 118	ERDS2TJ151	1/4W 150	R528	ERDS2TJ824	1/4W 820K	R813-817	ERDS2TJ103	1/4W 10K
R119, 120	ERDS2TJ100	1/4W 10	R529	ERDS2TJ124T	1/4W 120K	R818	ERDS2TJ821	1/4W 820
R121, 122	ERDS2TJ101	1/4W 100	R530	ERDS1FVJ472T	1/2W 4.7K Δ	R819	ERDS2TJ102	1/4W 1K
R123, 124	ERDS2TJ151	1/4W 150	R531, 532	ERDS1FVJ100T	1/2W 10 Δ	R820	ERDS2TJ122	1/4W 1.2K
R125, 126	ERDS2TJ682T	1/4W 6.8K	R533, 534	ERDS2TJ182	1/4W 1.8K	R821	ERDS2TJ152	1/4W 1.5K
R127, 128	ERDS2TJ823T	1/4W 82K	R535	ERDS2TJ562	1/4W 5.6K	R822	ERDS2TJ182	1/4W 1.8K
R129, 130	ERDS2TJ334	1/4W 330K	R550, 551	ERDS2TJ222	1/4W 2.2K	R823	ERDS2TJ222	1/4W 2.2K
R131, 132	ERDS2TJ561	1/4W 560	R555-558	ERG1SJ681E	1W 680	R824	ERDS2TJ332	1/4W 3.3K
R201-214	ERDAS3J102T	1/4W 1K	R559	ERG1SJ152E	1W 1.5K	R825	ERDS2TJ472	1/4W 4.7K
R215, 216	ERDLS2VJ332T	1/4W 3.3K	R560	ERG1SJ182E	1W 1.8K	R826, 827	ERDS2TJ103	1/4W 10K
R217, 218	ERDS2TJ334	1/4W 330K	R561, 562	ERG1SJ151E	1W 150	R828, 829	ERDS2TJ102	1/4W 1K
R251	ERDS1FVJ100T	1/2W 10 Δ	R563, 564	ERG1SJ181E	1W 180	R830	ERDS2TJ223	1/4W 22K
R301, 302	ERDAS3G561	1/4W 560	R565-570	ERDS2TJ223	1/4W 22K	R831	ERDS2TJ104	1/4W 100K
R303, 304	ERDS2TJ104	1/4W 100K	R604	ERDS2TJ181T	1/4W 180	R832	ERDS2TJ102	1/4W 1K
R305, 306	ERDS2TJ224T	1/4W 220K	R611-614	ERDAS3G223T	1/4W 22K	R833	ERDS2TJ103	1/4W 10K
R307, 308	ERDS2TJ392T	1/4W 3.9K	R615-618	ERDAS3G103T	1/4W 10K	R834	ERDS2TJ221	1/4W 220
R309, 310	ERDS2TJ223	1/4W 22K	R619	ERDS2TJ151	1/4W 150	R835	ERDS2TJ181T	1/4W 180
R311, 312	ERDS2TJ102	1/4W 1K	R620	ERDS2TJ153	1/4W 15K	R837, 838	ERDS2TJ102	1/4W 1K
R313, 314	ERDS2TJ392T	1/4W 3.9K	R621, 622	ERDS2TJ223	1/4W 22K	R839, 840	ERDS2TJ682T	1/4W 6.8K
R315, 316	ERDS2TJ222	1/4W 2.2K	R624	ERDS2TJ333	1/4W 33K	R843	ERDS2TJ472	1/4W 4.7K
R317, 318	ERDS2TJ391	1/4W 390	R625	ERDS2TJ223	1/4W 22K	R845	ERDS2TJ334	1/4W 330K
R319, 320	ERDS2TJ183T	1/4W 18K	R626	ERDS2TJ103	1/4W 10K	R852, 853	ERDS2TJ103	1/4W 10K
R401, 402	ERDLS2VJ102T	1/4W 1K	R628	ERDS2TJ564	1/4W 560K	R854	ERDS2TJ471	1/4W 470
R403, 404	ERDAS3G823T	1/4W 82K	R629	ERDS2TJ473	1/4W 47K	R860-862	ERDS2TJ104	1/4W 100K
R405, 406	ERDLS2VJ102T	1/4W 1K	R630	ERDS2TJ120T	1/4W 12	R863	ERDS2TJ102	1/4W 1K
R407, 408	ERDAS3G184T	1/4W 180K	R632	ERDS2TJ102	1/4W 1K	R864	ERDS2TJ223	1/4W 22K
R409-412	ERDAS3G562T	1/4W 5.6K	R633	ERDS2TJ563	1/4W 56K			
R413, 414	ERDAS3G101T	1/4W 100	R634	ERDS2TJ223	1/4W 22K			CAPACITORS
R415, 416	ERDS2TJ183T	1/4W 18K	R635, 636	ERDS2TJ103	1/4W 10K			
R417, 418	ERDAS3J271T	1/4W 270	R637	ERDS2TJ222	1/4W 2.2K	C101, 102	ECBT1H101KB5	50V 100P
R419, 420	ERDAS3G822T	1/4W 8.2K	R650	ERDS2TJ562	1/4W 5.6K	C103, 104	ECBT1H102KB5	50V 1000P
R421, 422	ERDAS3G153T	1/4W 15K	R651	ERDS2TJ912T	1/4W 9.1K	C105, 106	ECBT1H820KB5	50V 82P
R423-426	ERDAS3G101T	1/4W 100	R652	ERDS2TJ333	1/4W 33K	C107, 108	ECA0JM222B	6.3V 2200U
R427-430	ERDAF2VJ122T	1/4W 1.2K Δ	R707, 708	ERDAF2VJ6R8T	1/4W 6.8 Δ	C109, 110	ECRW1H222KB5	50V 2200P
R431, 432	ERDAF2VJ101T	1/4W 100 Δ	R709	ERDAF2VJ470T	1/4W 47 Δ	C111, 112	ECQB1H122JF3	50V 1200P
R457	ERDS2TJ183T	1/4W 18K	R710	ERDS1FVJ331T	1/2W 330 Δ	C113, 114	ECQB1H103JF3	50V 0.01U
R459, 460	ERDAF2VJ101T	1/4W 100 Δ	R711	ERDS2TJ222	1/4W 2.2K	C115, 116	ECQB1H393JF3	50V 0.039U
R461-464	ERDS2TJ333	1/4W 33K	R712	ERDAF2VJ180T	1/4W 1.0 Δ	C117, 118	ECA1HPXS010B	50V 1U
R465-468	ERDAF2VJ101T	1/4W 100 Δ	R713	ERDS2TJ223	1/4W 22K	C119, 120	ECQB1H472JF3	50V 4700P
R469	ERDS2TJ103	1/4W 10K	R714	ERDS2TJ222	1/4W 2.2K	C121, 122	ECQB1H103JF3	50V 0.01U


Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C123-126	ECBT1H270J5	50V 27P	C755, 756	ECEA1HBZ4R7B	50V 4.7U
C127, 128	ECBT1H101KB5	50V 100P	C757, 758	ECA2APXS100B	100V 10U
C129, 130	ECBT1E103ZF	25V 0.01U	C801-803	ECBT1C103NS5	16V 0.01U
C201-214	ECBT1H101KB	50V 100P	C804	ECA1AM102B	10V 1000U
C251, 252	ECEA0JKA101B	6.3V 100U	C805	ECEA1HKAR47B	50V 0.47U
C253, 254	ECBT1H104ZF5	50V 0.1U	C806	ECEA1HKA2R2B	50V 2.2U
C301, 302	ECA1HPXS3R3B	50V 3.3U	C807	ECBT1H102KB5	50V 1000P
C303, 304	ECCR1H101K5	50V 100P	C808	ECEA0JKA101B	6.3V 100U
C305, 306	ECBT1H820KB5	50V 82P	C809	ECBT1C103NS5	16V 0.01U
C307, 308	ECA1HPXS4R7B	50V 4.7U	C810	ECEA1AKA470B	10V 47U
C309, 310	ECBT1H390J5	50V 39P	C811	ECBT1H101KB5	50V 100P
C311, 312	ECA1CPXS100B	16V 10U	C812, 813	ECKR1H103ZF5	50V 0.01U
C313, 314	ECQV1H823JM3	50V 0.082U	C814, 815	ECA1HPXS4R7B	50V 4.7U
C315, 316	ECQB1H153JF3	50V 0.015U	C820	ECQV1H224JM3	50V 0.22U
C317, 318	ECQB1H183JF3	50V 0.018U	C821	ECBT1H473ZF5	50V 0.047U
C319, 320	ECQB1H222JF3	50V 2200P			
C321, 322	ECBT1E223ZF	25V 0.022U			
C323, 324	ECBT1H121KB5	50V 120P			
C403, 404	ECKR1H271KB5	50V 270P			
C405, 406	RCE1EAS470B	25V 47U			
C407, 408	ECCR1H070D5	50V 7P			
C409, 410	ECKR1H391KB5	50V 390P			
C411, 412	ECCR1H030C5	50V 3P			
C413, 414	ECQB1H222JF3	50V 2200P			
C451, 452	ECKR1H333ZF5	50V 0.033U			
C453-456	ECCV2H680K	500V 68P			
C457-460	ECEA1HKA3R3B	50V 3.3U			
C501-504	ECA0JPXS101B	6.3V 100U			
C505, 506	ECQV1H473JM3	50V 0.047U			
C507	ECEA1CKA101B	16V 100U			
C508	ECA1HM470B	50V 47U			
C509	ECEA1HN100SB	50V 10U			
C511, 512	ECBT1H270J5	50V 27P			
C513-518	ECQV1H473JM3	50V 0.047U			
C519-522	ECQB1H393JF3	50V 0.039U			
C523, 524	ECBT1H102KB5	50V 1000P			
C525, 526	ECKD1H821KB	50V 820P			
C531, 532	ECBT1C332KR5	16V 3300P			
C601	ECEA1HKAR47B	50V 0.47U			
C602	ECEA1CKA100B	16V 10U			
C603	ECEA1HKA3R3B	50V 3.3U			
C604	ECEA1HKA010B	50V 1U			
C605	ECEA0JKA331B	6.3V 330U			
C701, 702	ECETX1J123WX	63V 12000U Δ			
C707, 708	ECA1JPXH560E	63V 56U			
C709, 710	ECQE2334KFW	250V 0.33U			
C711	ECQE2104KF3	250V 0.1U			
C712	ECBT1C103NS5	16V 0.01U			
C714	ECA1CM471B	16V 470U			
C715	ECEA1HKA2R2B	50V 2.2U			
C716	ECA1CM102B	16V 1000U Δ			
C751-754	ECA1EPXS470B	25V 47U			

■ Cabinet Parts Location

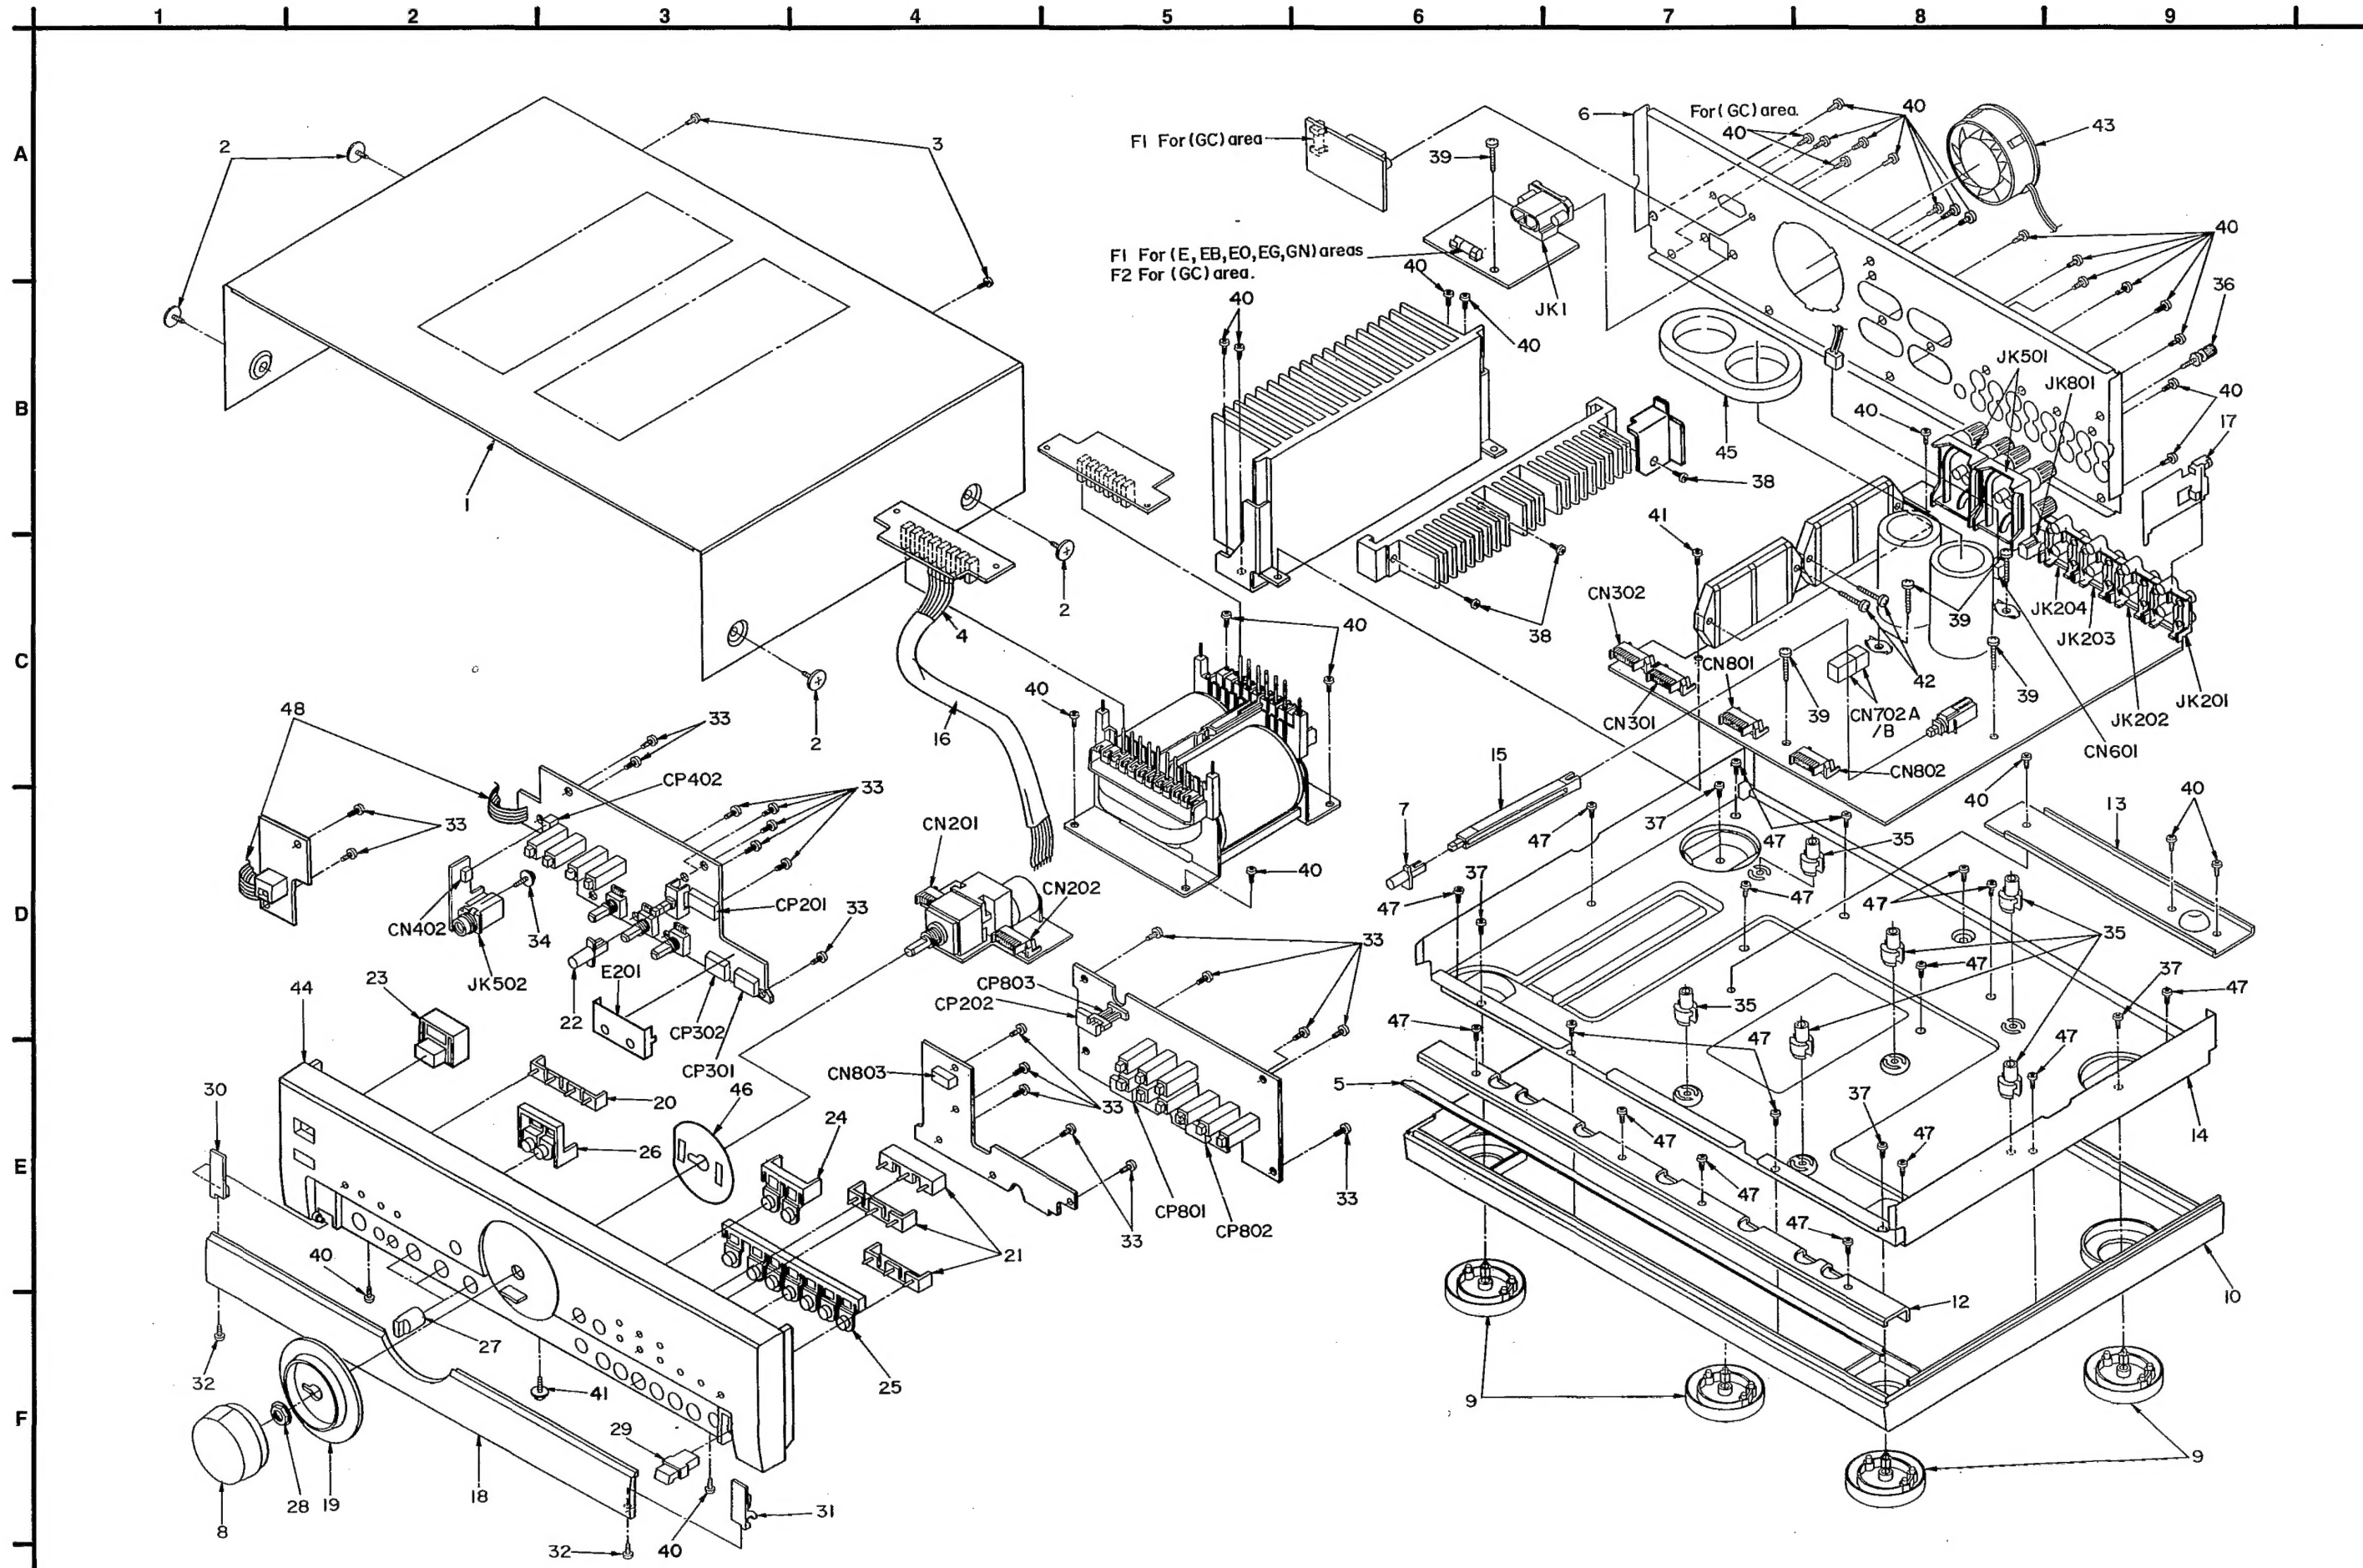


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS LIST				PACKING MATERIALS	
1	RKMO089C-1K	CABINET		P1	RPG2035	PACKING CASE	(EB)
2	RHD30035-K1	SCREW		P1	RPG2034	PACKING CASE	(E, EG, GC, GN)
3	XTBS3+8JFZ1	SCREW		P2	RPN0685	PAD	
4	RWJ3907330QQ	FLAT CABLE (7P) (W702)		P3	RPQ0164	ACCESSORY PAD	
5	RGK0588-T	ORNAMENT RUBBER		P4	XZB50X65A02Z	PROTECTION COVER	
6	RGR0171E-C1C	REAR PANEL	(EB)	P5	XZB24X34C04	PROTECTION COVER	
6	RGR0171A-EB	REAR PANEL	(E, EG)	P6	RPH0032	PROTECTION SHEET	(EB, GN)
6	RGR0171A-F1C	REAR PANEL	(GN)			ACCESSORIES	
6	RGR0171B-CC	REAR PANEL	(GC)				
7	RGU0609-K	BUTTON, PHONO SELECTOR		A1	RAK-SU129WH	REMOTE CONTROL TRANSMITTER	
8	RGW0203-K	KNOB, VOLUME		A1-1	RKMO057-K	BATTERY COVER	
9	RKA0053-A	FOOT		A2	VJA0733	AC POWER SUPPLY CORD	△ (EB) (SF)
10	RKU0051-K	RUBBER BASE		A2	RJAD019-2K	AC POWER SUPPLY CORD	△ (E, EG, GC) (SF)
12	RMA0818	ANGLE		A2	RJAD036-K	AC POWER SUPPLY CORD	△ (GN)
13	RMA0744-1	ANGLE		A3	RQA0013	WARRANTY CARD	(E, EB, EG)
14	RMKO190B-2	BOTTOM CHASSIS		A3	RQX74332A	WARRANTY CARD	(GN)
15	RMNO104	SWITCH SHAFT		A4	RQCB0169	SERVICE CENTER LIST	
16	RWZ120UNW240	TUBE		A5	RFKSA800MK2E	INSTRUCTIONS MANUAL	(E)
17	RSC0322	SHIELD PLATE (PHONO)		A5	RFKSA800MKEB	INSTRUCTIONS MANUAL	(EB, GN)
18	RKFO314-K	OPERATION DOOR		A5	RFKSA800MKEG	INSTRUCTIONS MANUAL	(EG)
19	RGK0630-S	ORNAMENT		A5	RFKSA900MKGC	INSTRUCTIONS MANUAL	(GC)
20	RGLO189-Q	PANEL LIGHT (A)		A7	SJP5213-2	POWER PLUG ADAPTOR	△ (GC)
21	RGLO190-Q	PANEL LIGHT (B)					
22	RGU0282	BUTTON, TONE					
23	RGU0882-K	BUTTON, POWER					
24	RGU0891-K	BUTTON, INPUT SELECTOR					
25	RGU0892-K	BUTTON, TAPE MONITOR etc.					
26	RGU0893-K	BUTTON, SPEAKERS					
27	RGW0178-K	KNOB, BASS/TREBLE etc.					
28	RHN90001	NUT					
29	RMQ0215A	DOOR STOPPER					
30	RMQ0378	DOOR HOLDER (R)					
31	RMQ0379	DOOR HOLDER (L)					
32	XQN26+AJ6FZ	SCREW					
33	XTBS26+8J	SCREW					
34	XTWS3+8T	SCREW					
35	SHE187-2	P. C. B. SUPPORT					
36	SNE2123	GND SCREW					
37	XTB3+14G	SCREW					
38	XTB3+16JFZ	SCREW					
39	XTB3+20JFZ	SCREW					
40	XTBS3+8JFZ1	SCREW					
41	XTWS3+8T	SCREW					
42	XTW3+15T	SCREW					
43	REMO040	FAN MOTOR					
44	RFKGA900MKEB	FRONT PANEL ASS'Y					
45	RMFO174	CUSHION					
46	RSC0323	SHIELD PLATE (VOLUME)					
47	XTB3+8GFZ	SCREW					
48	REZ0663	FLAT CABLE (4P) (W401)					



■ Packaging

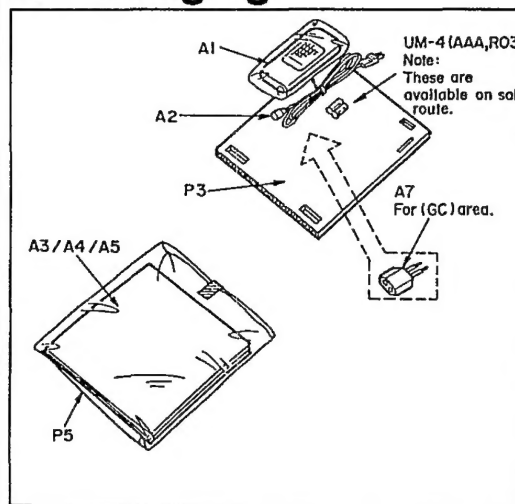

For (EB) area.

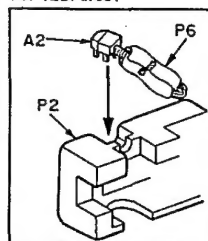

For (GN) area.

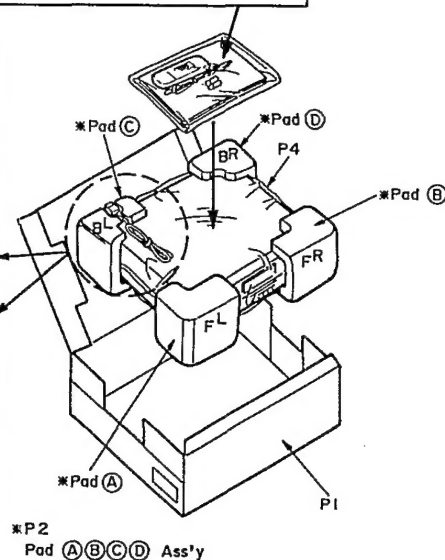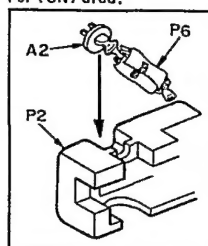

*P2
Pad (A)(B)(C)(D) Ass'y

912